

The Omega logo is displayed in a bold, lowercase, sans-serif font. The letter 'o' is distinguished by a horizontal line passing through its center. The logo is centered on the page, which features a large, light gray circular graphic element in the background.

Instruction Manual

OMEGA BUILT-IN DOUBLE OVEN

ODO684XB

Thank you for purchasing an Omega appliance

Tailored for the modern aesthetic and lifestyle of busy people, your new Omega Appliance will make a welcome addition to the family.

Omega caters to style-savvy customers who look for balance between stunning form and clever function. This means a combination of sleek, chic, sophisticated design yet effortless functionality.

And we source from the best. The best craftsmanship. The best innovation. From the best international design-houses.

All brought together under an appliance that stands for design-led balance.

Please take the time to read through the following instruction manual to familiarise yourself with the installation, operation requirements and maintenance to ensure optimum performance.

Further Information

For important information about your Omega Appliance such as warranty registration, manuals, features, and specifications please visit omegaappliances.co.nz (if you are in New Zealand) or contact our Customer Care team on the below email or phone numbers.

Contact Us

Our customer service team is here to help you with any question or concern.

Both teams are on call Monday to Friday, 8.30am to 5.00pm and of course you can always send an email at your convenience.

Email: customercare@monacocorp.co.nz

Phone: 09 415 6000

READ THE INSTRUCTION BOOKLET BEFORE INSTALLING AND USING THE APPLIANCE.

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference.

The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation or improper use of the appliance.

Due to continual product development, Omega reserves the right to alter specifications and appearances without notice.

Contents

Important Safety Warnings 4

Appliance Details 5

Electrical Connections 5

Installation Instructions 6

Operating Instructions 8

Maintenance and Cleaning 14

Troubleshooting 18

New Zealand Product Warranty Statements of Standard Warranty Conditions 19

Disposal Information

- Most of the packaging materials are recyclable. Please dispose of these materials through your local recycling depot or by placing them into appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

Important Safety Warnings

IMPORTANT: Read the assembly instructions and safety precautions of this booklet carefully before removing the contents of the carton.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
2. In certain circumstances electrical appliances may be a danger hazard.
3. Do not place heavy objects in or on these appliances, or use for storage, or let children play or swing from the door. These appliances are designed for cooking food only.
4. This appliance is designed for domestic household use only and for the cooking of domestic food products. Use as a commercial appliance will void the warranty. It should not be used in a marine environment or outdoors.
5. If the electrical supply cord is damaged, either when being installed or after installation, it must be replaced by the manufacturer, its service center or similarly qualified persons to prevent a hazard.
6. The electrical connection must be accessible after installation. The appliance must be electrically isolated before any maintenance can be performed, which includes changing a lamp.
7. Electrical connection must be made as per local wiring rules and regulations. Do not disconnect the appliance with wet hands or bare feet, and do not disconnect the power cord with extreme force.
8. Always grasp the oven door in the center of the handle as the areas around the door edges may be hot due to the escape of hot air.
9. Ensure that the kitchen is well ventilated or mechanical ventilation is in use while cooking in this appliance.
10. Do not store or use flammable materials or aerosols near the oven. Items made from aluminium, plastic or plastic film should also be kept away from the appliance, as they may fuse to the surface.
11. Never line the oven bottom with aluminium foil, as the consequent accumulation of heat could compromise the cooking and even damage the enamel.
12. **WARNING** - The oven will become hot during and directly after use. Do not touch any components during this time, as they may be hot and can cause burns. Do not touch the heating elements inside the oven to avoid burns. Young children should be kept away. Use heat resistant cooking gloves where-ever possible when moving food and cooking utensils in and out of the oven.
13. Cleaning may only be commenced on the appliance once it has cooled down (best slightly warm). The appliance should be disconnected from the power outlet or turned off at your isolation switch before commencing any cleaning process. Do not use a steam jet or any other high pressure cleaning equipment to clean the appliance. Follow oven cleaner directions if these are being used.
14. Wash all accessories in hot soapy water or in a dishwasher, wipe dry with a paper or cloth towel. If you use your oven for an extended period of time, condensation may form. Dry it using a soft dry cloth.
15. When the appliance is not being used, the knobs must be kept in the 'OFF' position.
16. Where this appliance is installed in a caravan, it shall NOT be used as a space heater.
17. Do not modify this appliance.
18. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass as it can scratch the surface, which may result in the glass shattering. Clean the glass door using warm damp cloth and dry it with a soft cloth.
19. All cabinetry and materials used in the installation must be able to withstand a minimum temperature of 50°C above the ambient temperature of the room it is in, whilst in use. Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures outside the guidelines given above. Any damage caused by the appliance being installed without adhering to the temperature limits set out above will be the liability of the owner.
20. This appliance must be correctly installed by a suitably qualified person, strictly in accordance with the manufacturer's instructions. Please see the specific section of this booklet that refers to installation.
21. The appliance must be installed and put in operation by an authorized technician under the conditions provided by the manufacturer in this manual. The manufacturer cannot be held responsible for any damage that might occur due to faulty installation.
22. The values indicated on the printed documents found on the product are values obtained in laboratory environment according to relevant standards. These values may vary according to the usage and environment conditions of product.
23. **WARNING** – Ensure that the appliance is switch off before replacing the lamp to avoid the possibility of electric shock.



**DO NOT OPERATE THIS APPLIANCE BEFORE READING THE INSTRUCTION BOOKLET
DO NOT PLACE ARTICLES ON OR AGAINST THIS APPLIANCE
DO NOT STORE CHEMICALS OR FLAMMABLE MATERIALS OR SPRAY AEROSOLS NEAR THIS
APPLIANCE**

Appliance Details

Electrical Details

Model	ODO684XB
Rated Voltage	220-240V ~50Hz
Rated Power Input	4360-5190W

Dimensions

DEPTH (mm)	WIDTH (mm)	HEIGHT (mm)
546	595	888

Electrical Connections

LOCAL AUTHORITY REQUIREMENTS



Installation is only permitted by a licensed electrician and carried out according to instructions provided by the manufacturer. Incorrect installation might cause harm and damage which the manufacturer accepts no responsibility.

ELECTRICAL INSTALLATION FOR THE LICENSED ELECTRICIAN

This oven must be connected to a 220-240V 50Hz power supply. It is earthed via the cord. Before carrying out the connection to the power supply, the voltage rating of the appliance (stamped on the appliance identification plate) must be checked for correspondence to the available mains supply voltage, and the mains electric wiring should be suitable for the oven's power rating (also indicated on the appliance identification plate).

The switched outlet must be connected to a suitable earth wiring, in conformity to current safety regulations.

It should not be located above the appliance and no more than 1.25m away from it. The power supply cord must not touch against any hot surfaces and must be placed so that its temperature does not exceed 75°C at any point along its length. Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

After having installed the appliance, the switched outlet must always be in an accessible position.

NOTE: For connections to the mains power supply, never use adapters, reductions or multiple power points as these may overheat and catch fire. A circuit breaker with a contact opening of at least 3mm must be installed inside the supply circuit.

The mains terminal block is located on the back of the oven and the terminals are accessible by opening the terminal block cover.

NOTE: The terminal cover should not be opened when the mains power is still connected to the appliance and never by an unauthorized person.

The electrical safety of this appliance can only be guaranteed if the oven is correctly and efficiently earthed. The manufacturer declines all responsibility for damage resulting from an installation which has not been earthed correctly.

Installation Instructions



The adjacent furniture must be able to withstand a minimum temperature rise of 100°C above the ambient temperature of the room it is in, during periods of use. The power supply to the appliance must be cut off before any adjustments or maintenance work is done on it.

PREPARATION FOR INSTALLATION AND USE


Manufactured with best quality parts and materials, this modern, functional and practical oven will meet your needs in all respects. Ensure to read the manual to obtain successful results so as not to experience any problems in the future. The information given below contains rules that are necessary for correct positioning and service operations. They should be read without fail, especially by the technician who will position the appliance.

CHOOSING A PLACE FOR THE APPLIANCES

There are several points to pay attention to when choosing a place for your oven. Please follow the recommendation below to prevent issues and hazardous situations in the future.

When choosing a place for the oven, attention should be paid that there are no flammable or combustible materials in the close vicinity, such as curtains, oil, cloth etc. which quickly catch fire.

Furniture surrounding the oven or cooktop must be made of materials resistant to temperatures above 100 C°. Required changes to wall cabinets and exhaust fans above a built-in cooktop as well as minimum heights from the oven board are shown in Figure 1. Accordingly, the exhaust fan should be at a minimum height of 65 cm from the cooktop. If there is no exhaust fan the height should not be less than 70 cm.

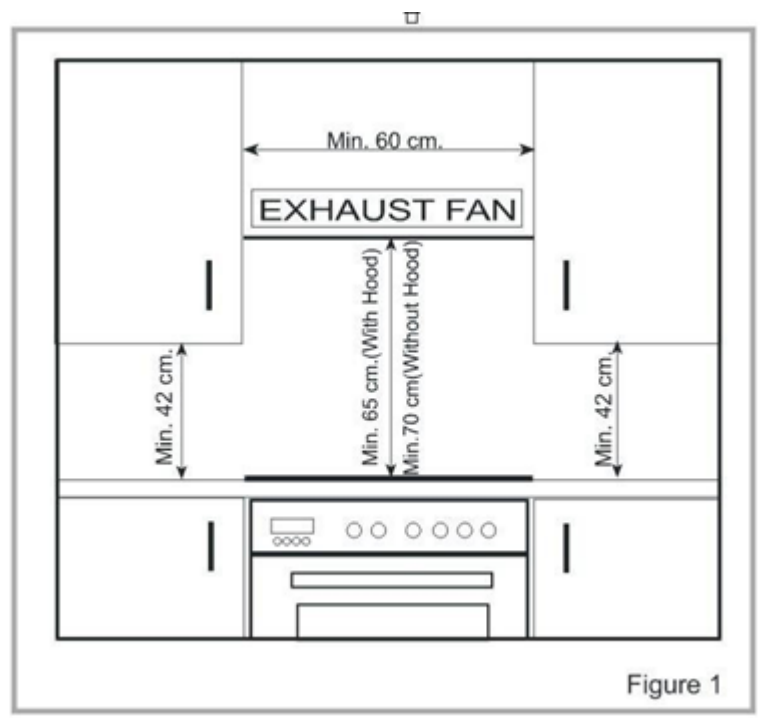


Note: The appliance must not be installed behind a decorative door to avoid overheating.

Installation Instructions


Insert the oven into cabinet partly by pushing it forward. Open the oven door and insert 2 screws into the holes on the oven frame. While the product frame touches the wooden surface of the cabinet, tighten the screws. If installed under a cooktop, there must be at least 50mm between the two appliances, and the distance between the worktop and the top of the control panel must be a minimum of 25mm.

The dimensions and material of the cabinet in which the oven will be installed must be correct and resistant to increases in temperature. In a correct installation, contact with electrical or insulated parts must be prevented. Insulating parts need to be fitted in a way to ensure that they cannot be removed by using any kind of tool.

Installing the appliance in the close vicinity of a refrigerator or a deep freezer is not recommended as the performance of the oven will be negatively affected due to emanating heat. After removing your oven from its packaging, ensure the oven is not damaged. If you suspect any damage to the appliance, do not use it; immediately contact an authorized Service Centre.

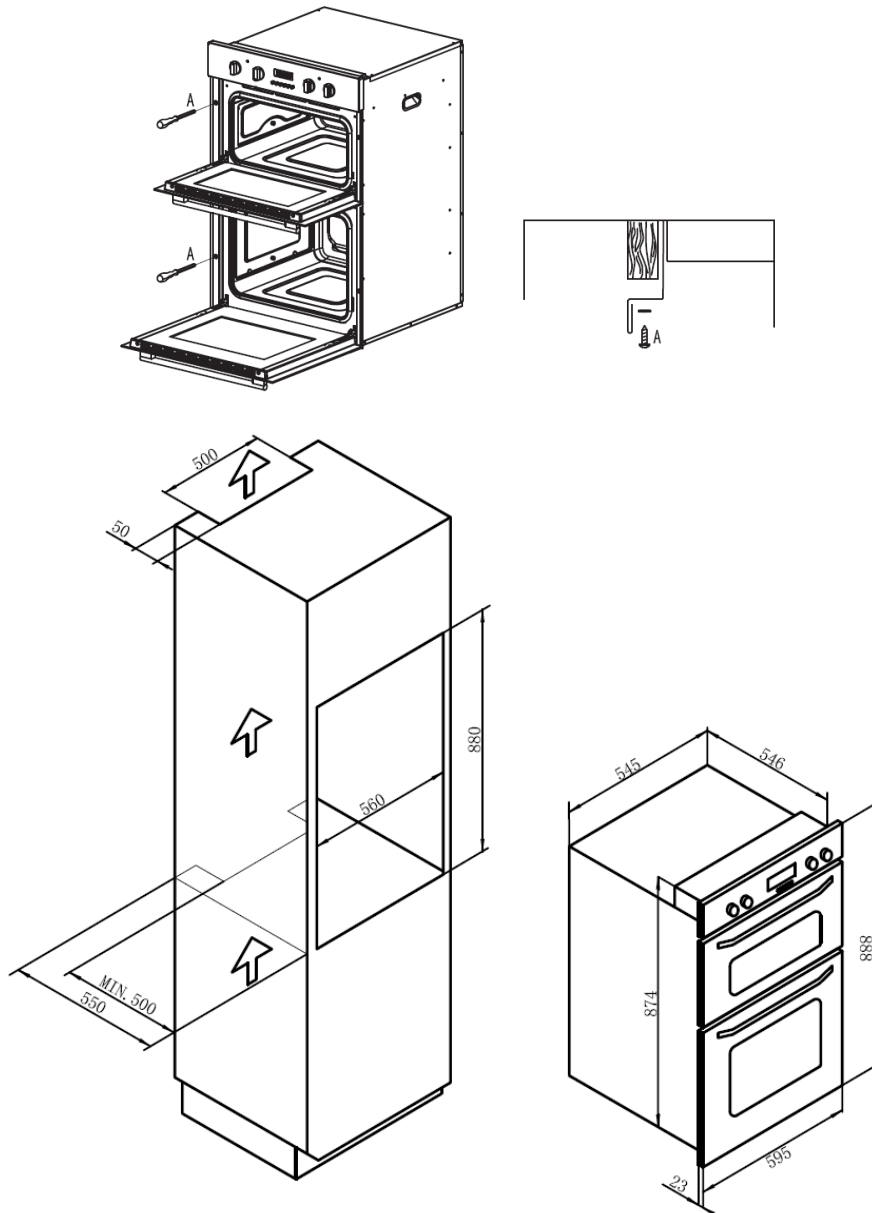


Operating Instructions

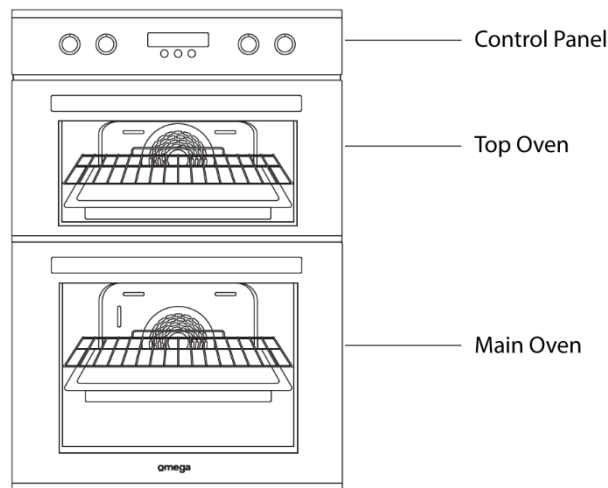

When you first run your oven, you may notice a smell emitted from the insulation material and heating elements. To eliminate this, run the oven empty at maximum temperature for 45 minutes before using it. Additionally, ensure the area where the oven is installed is properly ventilated. To use your oven, adjust the oven function and temperature settings, and, if available, program the oven timer. Without these adjustments, the oven will not operate. Always unplug your appliance when not in use.

Protect your appliance from atmospheric effects. Do not leave it under the effects of the sun, rain, snow, dust etc.

Controls

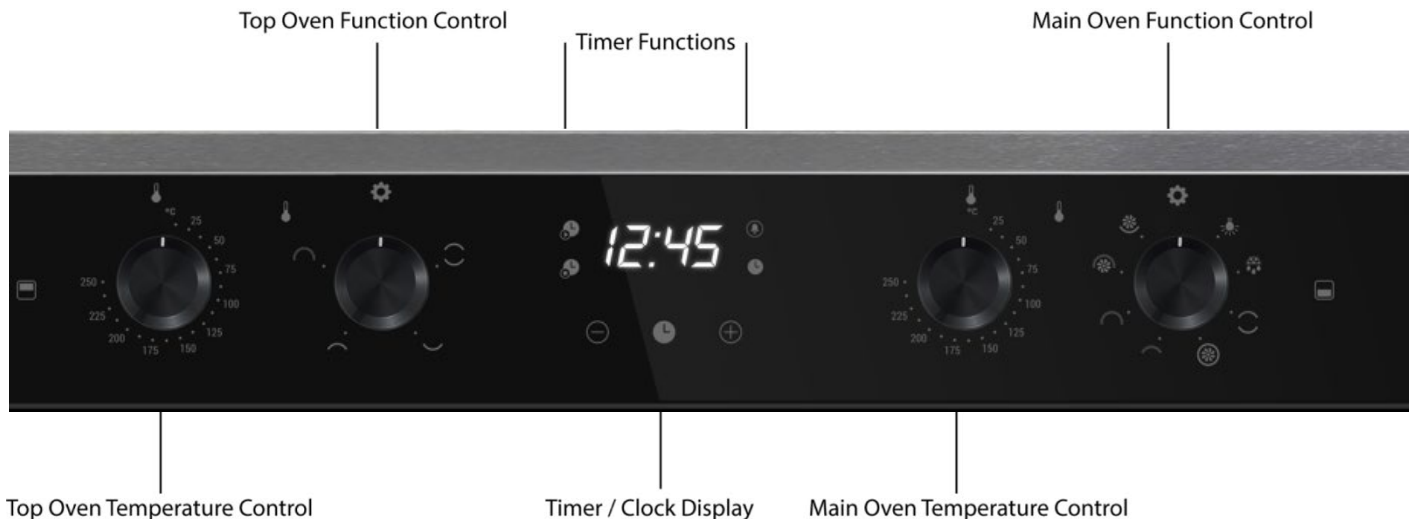

Top Oven Function Control: To set the cooking function for the top oven.

Top Oven Temperature Control: To set the desired temperature for cooking with the top oven.





Main Oven Function Control: To set the cooking function for the main oven.

Main Oven Temperature Control: To set the desired temperature for cooking with the main oven.







Timer Functions: Allow the oven to display clock, timer and oven temperature.

Operating Instructions

Top Oven Functions

-  **Conventional**
Both the lower and upper heating elements operate together. This is the traditional cooking method.
-  **Bottom Heating Element**
This function is particularly indicated for cooking from the bottom, warming up food or sterilizing glass jars. It is also recommended for foods requiring long and slow cooking, i.e. casseroles. This function can be used between 50°C and 250°C.
-  **Top Heating Element**
This function is ideal for warming pre-cooked food when placing the grid on the second shelf from the top, or for defrosting pastry by placing the grid on the first shelf from the bottom. This function can be used between 50°C and 250°C.
-  **Maxi Grill**
It is designed for grilling and browning traditional dishes. It provides an intense, even heat for achieving a crispy, gold finish on your food.

Main Oven Function Controls

-  **Internal Oven Light**
-  **Fan Defrost**
The air at ambient temperature is circulated inside the oven to defrost food more quickly and without altering the proteins.
-  **Conventional**
A conventional oven works on the principle that heat rises. It is hotter at the top than at the bottom - ideal for cooking meat in different side simultaneously.
-  **Fan Forced**
Both the fan and the circular heating element operate together. The hot air adjustable between 50°C and MAX°C is evenly circulated inside the oven. This is ideal for cooking several types of food (meat, fish) at the same time without affecting taste and smell. It is indicated for delicate pastries.
-  **Grill**
It is designed for grilling and heating small quantities of traditional food.
-  **Maxi Grill**
It is designed for grilling larger batches of food with entire upper heating element on.

Operating Instructions

Main Oven Function Controls

Fan Forced Maxi Grill



Important: do not set thermostat knob (C) to over 175°C. During grilling, keep the oven door closed. All grill components and fan will be activated. In this setting, the central heating elements of the top will operate. This combination of features forces air circulation inside the oven throughout the cycle, enhancing the effect of indirect heat radiation from the heating elements. This will allow the heat to evenly penetrate the food and prevent burning.

Bottom heating Element with Fan





The air heated by the lower heating element is circulated by the fan to evenly distribute heat between 50°C and 200°C. This function is ideal for sterilizing glass jars.

Accessories

It is recommended that you use containers suited for the specific food you plan to cook. Glass containers, cake pans, and special oven trays designed for oven use (available at kitchenware stores) are also suitable. Ensure to follow the manufacture's guidelines for proper cookware items. The following recommendations apply to enamelled containers.

If the food being cooked does not completely cover the oven tray, if the food is taken directly from the freezer, or if the tray is used to collect the dripping juices during the grilling, some deformation of the tray may occur over time due to high temperatures generated during the cooking or baking. This is a normal physical response to heat transfer. Avoid placing a glass tray or container in a cold environment immediately after use. Do not place it on cold, wet surfaces. Allow the tray or container to cool gradually by placing it on a dry cloth or wooden board; otherwise, it may break. If using the large wire oven rack or grill, place a tray in one of the lower racks to catch fat or oil. For easier cleaning, add some water to this tray. When grilling, use the shelf in position 4 or 5.

Each wire grid and tray are designed with a built-in safety feature to help minimize them being accidentally pulled fully out. This comes in the way of a "step", positioned part-way in from the rear of the accessory. To fit them into the oven, push the wire grid or tray part way into the oven until the step "catches", then angle the part over the step & fully insert. To remove, repeat the operation in reverse.

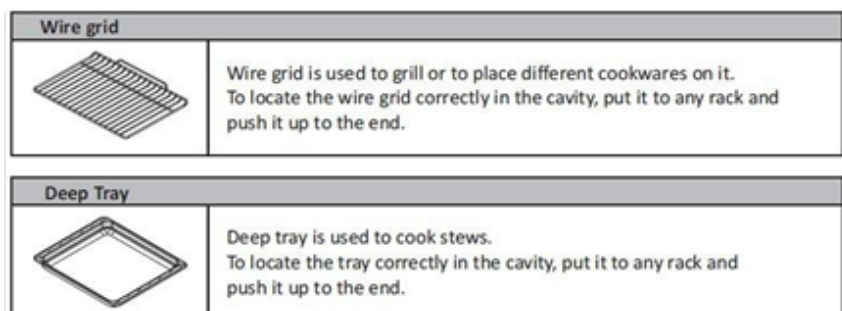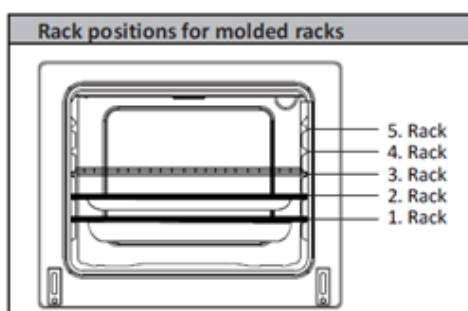

Operating Instructions

Timer Operation

Features:


24 hours clock with automatic programmer and minute minder. Timer is only for main oven.

Functions:


Minute minder, cooking time, cooking end time, and time of day.




 


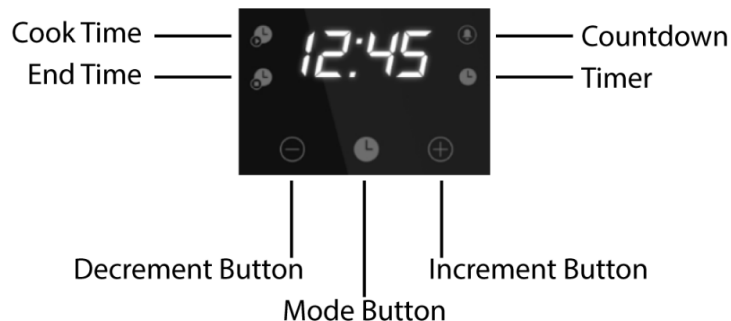Setting:

There are 3 buttons on the timer, “-”, “Mode”, and “+”. The Mode button is used to select the required timer function & the other two are used to decrease or increase a value. Press the + or – keys once to change a value by 1 or hold down to change faster.







Digital Timer Setting:

This oven only operates when the time has been set. When the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Timer  flashes automatically.

To change the time that has been set, press the selection button  repeatedly until the function indicator Time  flashes. Set the current time using the  or  buttons. The appliance is now ready to use. The time can only be changed if neither of the automatic functions (Cook time  or End time ) has been set.

Clock Functions

-  **Countdown**
To set a countdown, a signal will sound after the time has elapsed. This function does not affect the operation of the oven.
-  **Cook time**
To set how long the oven is to be in use.
-  **End Time**
To set when the oven is automatically switched off.
-  **Time**
To set, change or check the time.



Operating Instructions

How to use the Clock Functions

When a function has been selected, the corresponding function indicator flashes for 5 seconds. During this time, the desired times can be set using the \oplus or \ominus buttons.




Once the desired time has been set, the function indicator flashes for another 5 seconds. After that the function indicator is then lit. The set time begins to run.

Press any of the buttons to stop the acoustic signal.

The desired oven function and temperature can be selected before or after the clock functions of Cook Time  and End Time  are set.

When the cooking time has ended, turn the oven function and temperature control knobs back to the off position.



Countdown


Press the selection button  repeatedly, until the countdown indicator function  flashes. Using the \oplus or \ominus buttons, set the required countdown time (Max 23h 59m). After 5 seconds, the display shows the remaining time. The function indicator countdown  flashes and an acoustic signal will sound.

Press and button the switch off the alarm.

To adjust the countdown setting, press the selector button until the countdown function indicator flashes. The countdown can now be adjusted using the \oplus or \ominus buttons.



Cook Time

Press the selection button  repeatedly, until the function indicator Cook Time  flashes. Using the \oplus and \ominus buttons, set the required cooking time.

After 5 seconds, the display will return to the current time. The function indicator Cook Time  will light up.





When the time has elapsed, the function indicator will flash, an acoustic alarm will sound for 2 minutes, and the oven will automatically switch off. Turn the temperature control and oven function control knobs off.


Press any button to switch off the alarm.

To check or adjust the cook time, press the selection button  repeatedly until the cook time function indicator  is flashing. The display will show the current setting. Adjust the time using the \oplus and \ominus buttons.



Operating Instructions


End Time


Press the selection button  repeatedly until the function indicator End Time  flashes. The display will show the current time. Use the  and  buttons to set the required end time.



After 5 seconds, the display will return to the current time. The function indicator end time  will light up. When the time has been reached, the function indicator will flash, an alarm will sound for 2 minutes and the oven will automatically switch itself off. Turn the function control and temperature control knobs off. Press any button to switch off the alarm.

Cook Time and End Time Combined

Cook Time  and End Time  can be used simultaneously if the oven is to be automatically switched on and off at a later time.

Using the function Cook Time , set the period of time that the dish requires to cook.

Using the function End Time , set the time at which the dish is required to be ready.

The function indicators Cook Time  and End Time  will light up and the time will be shown on the display. The oven will automatically switch itself on when the current time reaches the cook time and will automatically switch itself off when the current time reaches the end time. Turn the oven function and temperature control knobs off when finished. Press any button to switch off the alarm.

Maintenance and Cleaning


Replace the Oven Lamp

- The appliance must first be disconnected from the power outlet or turned off at your isolation switch.
- Unscrew the glass cover attached to the lamp holder; counterclockwise.
- Unscrew the lamp and replace it with another high-temperature lamp with the following characteristics:

Type	E14
Voltage Rating	220-240V AC
Power Rating	25W
Temperature Rating	300°C

- Remount the glass cover and reconnect the appliance to the power supply.

NOTE: Should you experience any difficulty please contact your nearest after-sales service center.

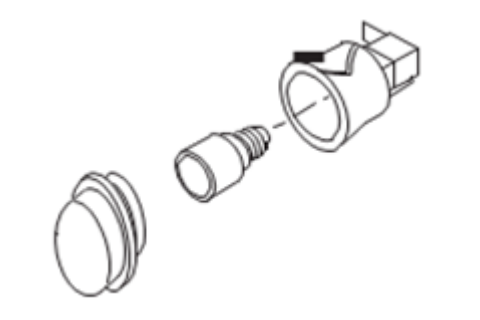

Maintenance and Cleaning

Removing the Oven Door

To make it easier to clean the inside of the oven, the oven door can be removed, by proceeding as follows:

- Open the door completely and lift the 2 levers “B” (figure1)
- Now, shutting the door slightly, you can lift it out by pulling out the hooks “A” as shown in figure 2.

Replacing the Oven Door

- With the door in vertical position insert the two hooks “A” into the slots
- Ensure that seat “D” is hooked perfectly onto the edge of the slot (move the oven door backwards and forwards slightly)
- Keep the oven door open fully, unhook the 2 levers “B” downwards and then shut the door again.

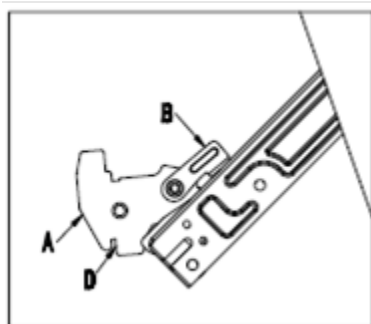


Fig. 1

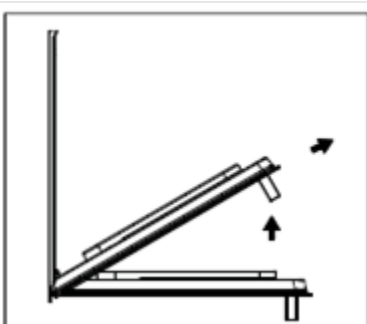


Fig. 2


Maintenance and Cleaning

Disassembling the Oven Door

The oven door is made up of 3 panes of glass and has vents at the top and bottom. When the oven is operating, air is circulated through the door to keep the outer pane cool. If condensation has worked its way in between the glass panes, the door can be dismantled to clean in between the panes. Remove the door as per above instruction and place it on a protective surface (e.g. on a tablecloth) to prevent it being scratched. The door handle should line up with the edge of the table. Ensure the glass lies flat to avoid the breakage of glass during cleaning.

To remove:


1. Undo the 2 screws on upper bracket
2. Take out the upper bracket and first pane of glass
3. Loosen the 4 clips
4. Slide out middle pane of glass carefully. Clean the glass panes and other parts with a damp microfiber cloth or sponge and a solution of hot water with a little washing-up liquid. Wipe dry using a soft cloth.

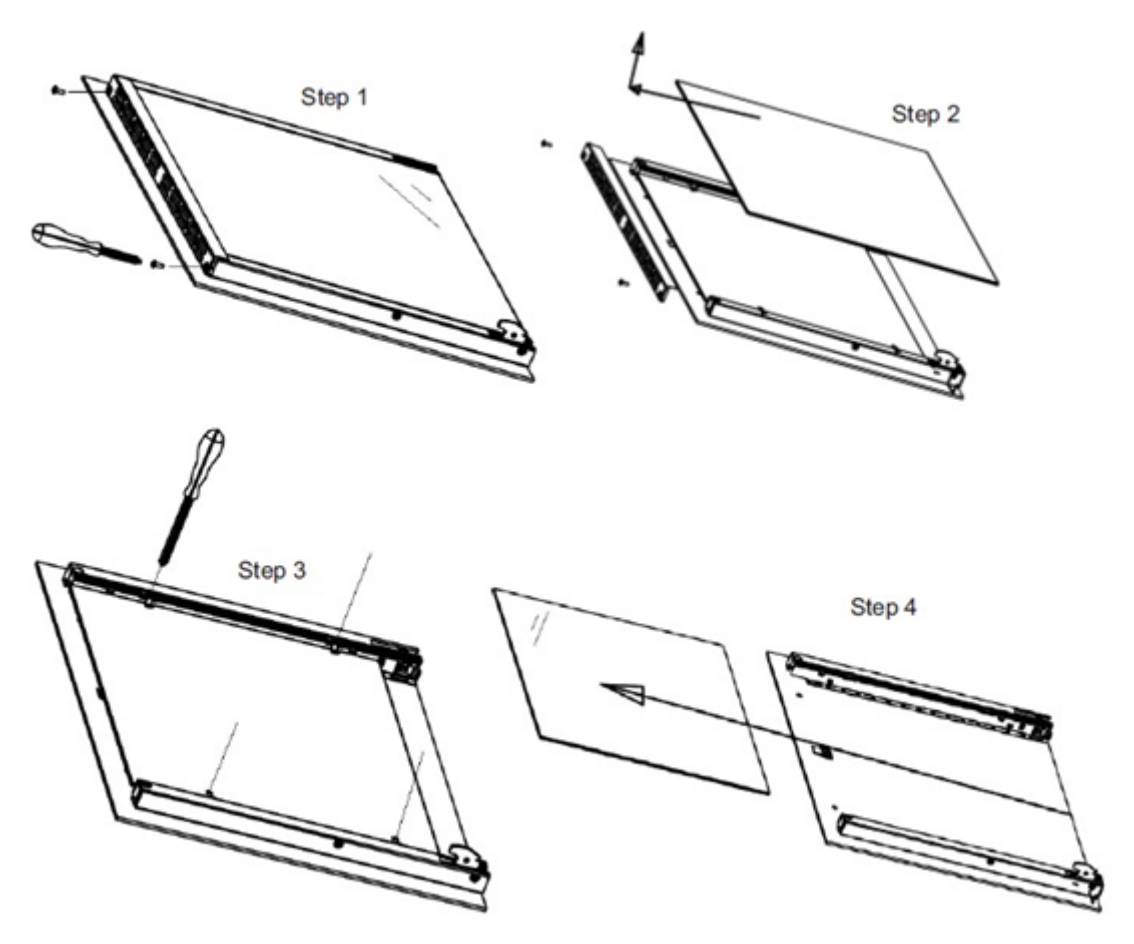

Maintenance and Cleaning

Fitting Oven Shelves

1. Ensure shelf orientation is correct.
2. Slide into oven at an angle until raised back of shelf is past the stop on side runners.
3. Lower front of shelf and push in until stop is reached.
4. To remove oven shelves, withdraw to the stop and raise the front of shelf to clear the stop.

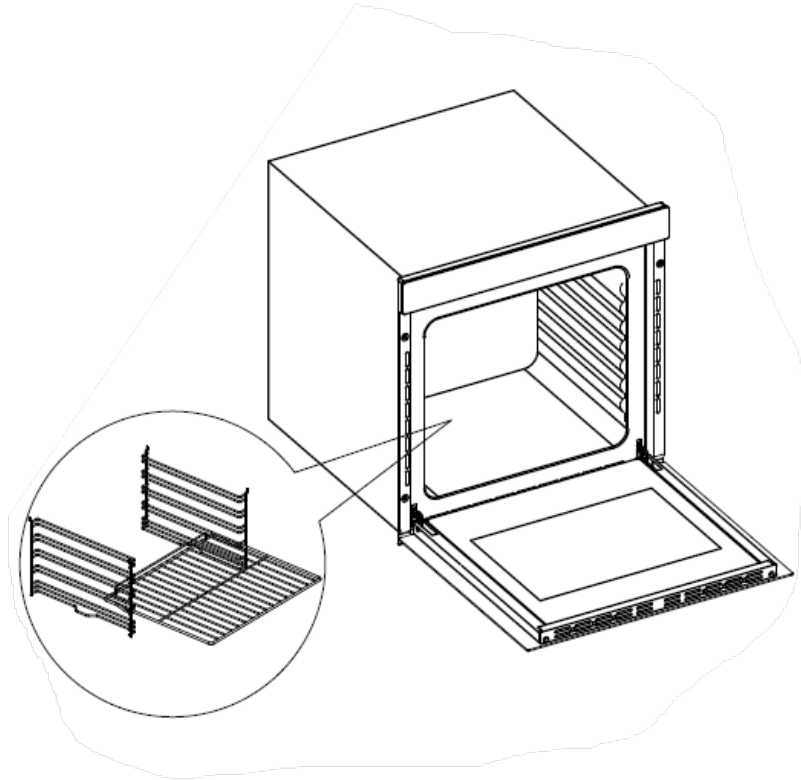

Maintenance and Cleaning



NOTE: Cleaning and maintenance operations must only be carried out when the oven is cooled down.

The appliance should be disconnected from the power outlet or turned off at your isolation switch before commencing any cleaning process.

Cleaning the oven exterior:

Before starting to clean your oven, be sure that all control buttons are off and your appliance has cooled down. Do not use cleaning materials containing particles that might scratch the enameled and painted parts of your oven. Use cream cleaners or liquid cleaners, which do not contain particles. As these cleaners may damage the surfaces, do not use caustic creams, abrasive cleaning powders, rough wire wool or hard tools. In the event of any excess liquids spilling over your oven surface during cleaning, clean up immediately to prevent possible damage to the enamel or metal surface. Do not use steam cleaners for cleaning the oven.

Cleaning the interior of the oven:

You will obtain best results if you clean the oven interior while the oven is slightly warm (the oven should not be operating). Wipe your oven with a soft piece of cloth (e.g. dish cloth) dampened with warm soapy water after each use, rinse cloth in warm water then wipe oven again and then finish by wiping with a dry cloth. For a complete cleaning process, use dry and powder type oven cleaners, following the oven cleaning product's instructions.

Troubleshooting

If the oven does not operate:

- The oven may be unplugged from the power source or switched off at the power source.
- The household fuse has blown, or household power supply is off.
- The Timer (if available) may not have been set correctly.

If the oven does not heat:

- The heat may not be set correctly with the oven's temperature setting.

If the interior lighting lamp does not light:

- The lamps are defective. If they are defective, you can change them following the instructions within this manual.

Cooking (if lower-upper part does not cook equally):

- Control the shelf locations, cooking period and heat values according to the manual.

Unit smoking when first used:

- This is a result of protective oils being removed and is to be expected with a first use.

Oven fan is still running even though knobs in off position:

- The cooling fan has activated to cool down the control; this is normal and may stay on for some time.

Clock Flashing on Display

- Power failure or interruption
- If you have any further problems with your product, please call your Authorized Service Centre.

New Zealand Product Warranty Statements of Standard Warranty Conditions

New Zealand Customers

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993.

Our Warranty

This product is also covered by the manufacturer's warranty set out in this document (Our Warranty).

Our Warranty is for a period of forty-eight (48) months from the date of purchase. This is in addition to (and does not exclude, restrict or modify) any rights or remedies to which you may already be entitled under the New Zealand Consumer Guarantee Act 1993 relating to this product. Our Warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defective materials or components, or faulty workmanship. The product will be repaired or replaced at the option of Omega, and all costs of installation, removal, cartage, freight travelling expenses and insurance are to be paid by the customer.

Our Warranty is subject to the following conditions:

1. That the purchaser contact Omega prior to any product repair.
2. That the purchaser carefully follows all instructions provided with the product and complies with all relevant electrical & plumbing regulations in their State when installing the product.
3. That the purchaser carefully follows the instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the DOMESTIC use for which it has been designed. If the appliance is used in commercial applications or for rental purposes, Our Warranty is limited to a warranty of Twelve (12) months covering all parts with Three (3) months on any labour cost of service or repair.

Service Area

The provision of service under Our Warranty is limited by the boundary / territory area of the nearest service centre. Travelling cost incurred for service outside this area is not covered by Our Warranty

and service will incur commercial cost to be paid by the customer regulated by the number of kilometres travelled beyond the service area. These costs will be disclosed to you for acceptance by you prior to your claim being processed. Microwave ovens must be returned to your nearest Authorised Service Centre for repair as they are a carry in serviceable appliance.

What is Covered by our Warranty

During the warranty period, Omega or its authorised Service Centre will, at no extra charge, if your appliance is readily accessible without the need of special equipment and subject to the terms and conditions of this warranty, repair or replace any parts which it considers defective.

What is not Covered by our Warranty

1. Products installed damaged or incomplete or not in compliance with the relevant electrical & plumbing regulations in their State.
2. Normal wear and tear eg. cleaning, light globes, filters etc.
3. Failure resulting from power surges and electrical storms.
4. Insect or vermin infestation.
5. Unauthorised repairs or use of non-genuine Omega parts.
6. Any failure caused by the product not being used in accordance with the instruction and the installation manual provided with the product.
7. Misuse or abuse, including failure to properly maintain or service.
8. The clearing of blockages in pumps and hoses.
9. Damage which occurs during delivery or installation.
10. Claims to product surface coating due to liquid or solid spillovers, accidental damage or damage caused from cleaning products not recommended by Omega.

How to Claim Our Warranty

To make a claim under Warranty you will need to contact Omega in New Zealand by using the contact details below.

If you are contacting Omega regarding any warranty claims and spare parts inquiries, please ensure you have the following information on hand:

1. Product Name/Model Number
2. Serial Number/s
3. Purchase Date (as per invoice or proof of purchase)
4. Purchased From
5. Warranty Registration Number (if registered)

Contact Us New Zealand

Omega is a division of Monaco Corporation (member of Shriro)

Phone: 09 415 6000

Email: customercare@monacocorp.co.nz

omega

omegaappliances.co.nz



omega

omegaappliances.co.nz