



Instruction Manual

60CM FREESTANDING DISHWASHER

ODW6015XDC

ODW6015BXDC

Thank you for purchasing an Omega appliance

Tailored for the modern aesthetic and lifestyle of busy people, your new Omega Appliance will make a welcome addition to the family.

Omega caters to style-savvy customers who look for balance between stunning form and clever function. This means a combination of sleek, chic, sophisticated design yet effortless functionality. And we source from the best. The best craftsmanship. The best innovation. From the best international design-houses.

All brought together under an appliance that stands for design-led balance.

Please take the time to read through the following instruction manual to familiarise yourself with the installation, operation requirements and maintenance to ensure optimum performance.

Further Information

For important information about your Omega Appliance such as warranty registration, manuals, features, and specifications please visit omegaappliances.co.nz (if you are in New Zealand) or contact our Customer Care team on the below email or phone numbers.

Contact Us

Our customer service team is here to help you with any questions or concerns. They are on call Monday to Friday from 8.30am to 5.00pm and of course you can always send an email at your convenience.

Email: customercare@monacocorp.co.nz

Phone: 09 415 6000

omega

omegaappliances.co.nz

READ THE INSTRUCTION BOOKLET BEFORE INSTALLING AND USING THE APPLIANCE.

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference.

The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation or improper use of the appliance.

Due to continual product development, Omega reserves the right to alter specifications and appearances without notice.

Contents

Important Safety Instructions..... 1

Installation Instructions..... 3

Operating Instructions 8

Care and Maintenance..... 17

Troubleshooting..... 19

Technical Information 22

New Zealand Product Warranty Statements of Standard Warranty Conditions..... 23

Disposal Information

- Most of the packaging materials are recyclable. Please dispose of these materials through your local recycling depot or by placing them into appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

Important Safety Instructions


1. **IMPORTANT:** Read the assembly instruction section and safety precautions of this booklet carefully before removing the contents of this carton.
2. Installation and repair can only be carried out by a qualified technician.
3. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments.
 - farm houses.
 - by clients in hotels, motels and other residential type environments.
 - bed and breakfast type environments.
4. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with the appliance.
5. Packaging material could be dangerous for children!
6. This appliance is for indoor household use only.
7. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
8. Please unplug before cleaning and performing maintenance on the appliance.
9. Wipe with a soft cloth dampened with mild soap, then dry with a clean cloth.
10. ⚠ This appliance must be earthed. In the event of malfunction or breakdown, earthing will reduce the risk of an electric shock by providing a path of least resistance of electric current. This appliance is equipped with an earthing conductor plug.
11. ⚠ The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local codes and ordinances.
12. ⚠ Improper connection of the equipment-earthing conductor can result in the risk of an electric shock.
13. If you are unsure whether the appliance is properly grounded, consult a qualified electrician or service representative.
14. Do not modify the plug provided with the appliance, if it does not fit the outlet.
15. Have a proper outlet installed by a qualified electrician.
16. Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
17. Do not operate your dishwasher unless all enclosure panels are properly in place.
18. Open the door carefully while the dishwasher is operating, as there is a risk of water squirting out.
19. Do not place any heavy objects on or stand on the door when it is open. The appliance could tip forward.
20. When loading the dishwasher, ensure that sharp items are positioned so that they do not damage the door seal.
21. ⚠ Warning: Knives and other sharp-pointed utensils must be loaded with their points facing down or placed horizontally.

Important Safety Instructions

22.  Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with skin and eyes and keep children away from the dishwasher when the door is open.
23. Check that the detergent receptacle is empty after completion of the wash cycle.
24. Do not wash plastic items unless they are marked “dishwasher safe” or the equivalent.
25. For plastic items without a marking, check the manufacturer's recommendations.
26. Use only detergent and rinse aid recommended for automatic dishwashers.
27. Never use soap, laundry detergent, or hand-washing detergent in your dishwasher.
28. Do not leave the door open, as this could increase the risk of tripping.
29. If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or a qualified professional to prevent any hazards.
30. During installation, the power supply must not be bent or flattened excessively or dangerously.
31. Do not tamper with controls.
32. The appliance needs to be connected to the main water valve using new hose sets. Old sets should not be reused.
33. To save energy, in standby mode, the appliance will switch off automatically while there is not any operation in 30 minutes.

Installation Instructions

Product overview

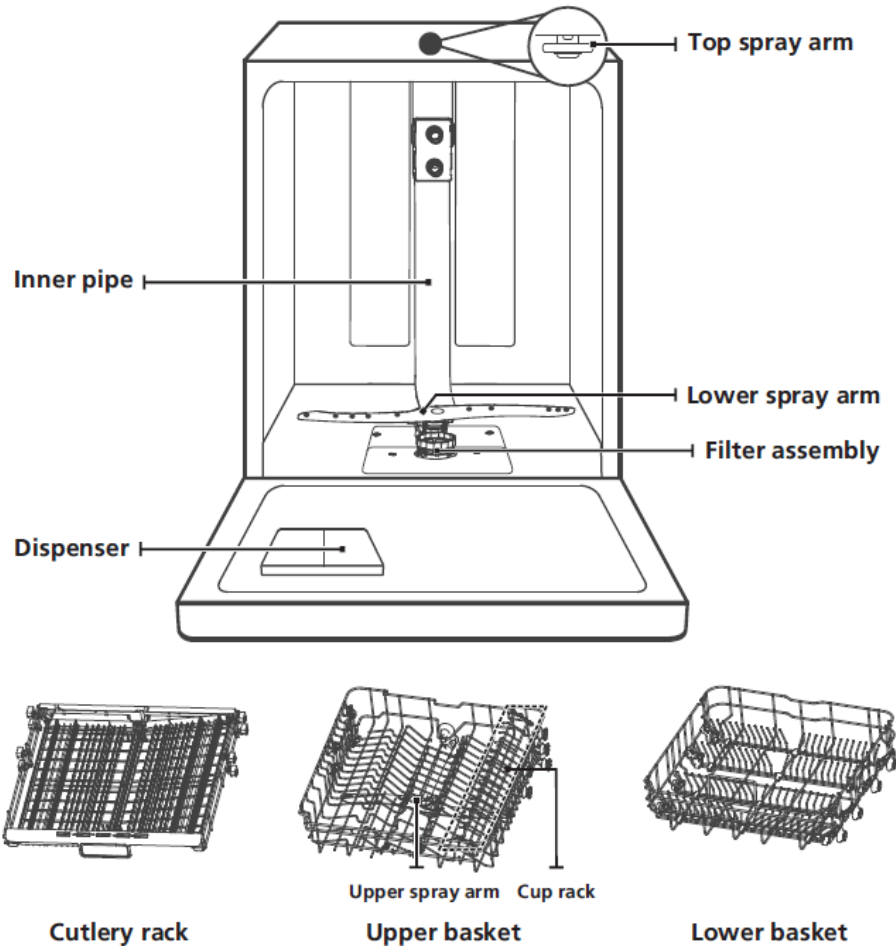


Note: Diagrams are for reference only. The actual product may vary.

Positioning the appliance

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or walls. The dishwasher is equipped with water supply and drain hoses that can be positioned on either the right or left side for proper installation.

Levelling the appliance

Once the appliance is positioned for levelling, the height of the dishwasher can be adjusted by screwing the levelling feet. Under no circumstances, the dishwasher can be inclined more than 2°.

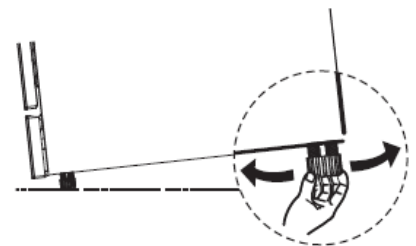


Installation Instructions


Selecting the best location for the dishwasher

The dishwasher should be installed close to the existing water inlet, drain connection, and power supply. The diagram showing the cabinet dimensions and the installation position of the dishwasher is provided.

1. Ensure that the clearance between the top of the dishwasher and the cabinet is less than 5mm, and that the outer door is aligned with the cabinet front.

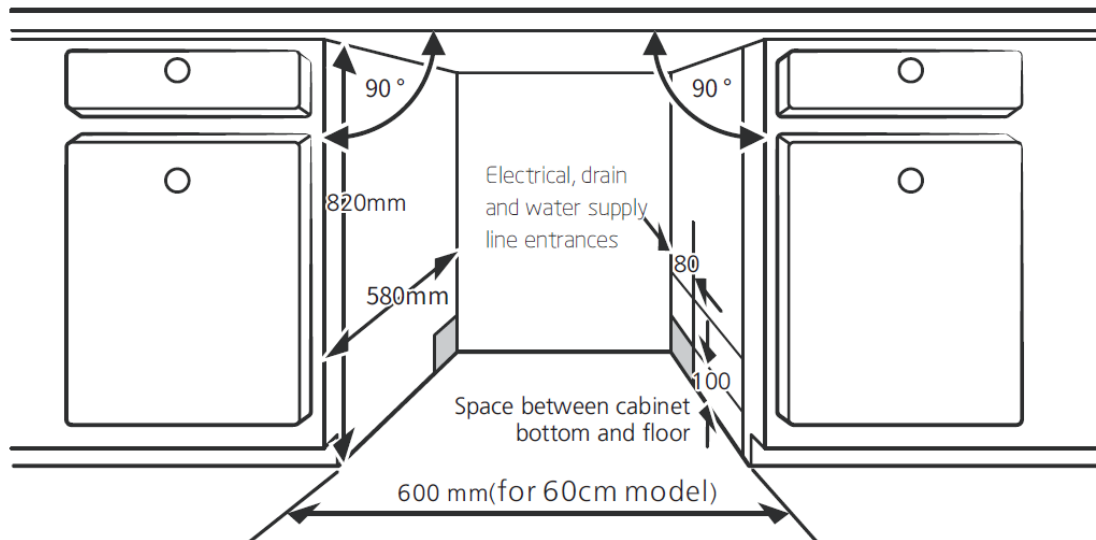

2. If the dishwasher is installed in a corner, ensure that sufficient clearance is left to fully open the door.

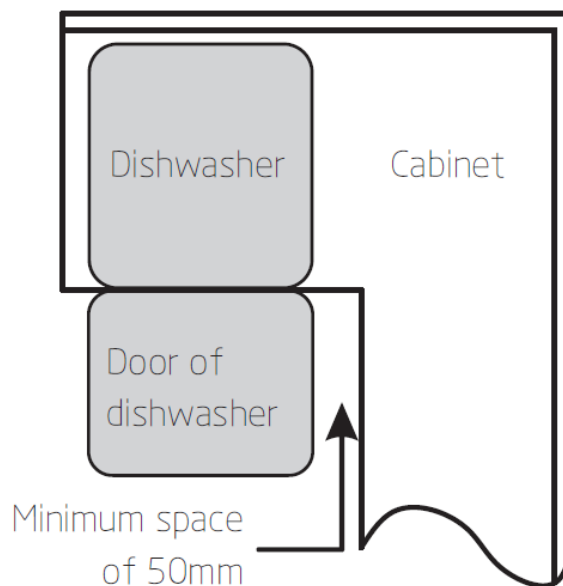

Note: Depending on the location of the electrical outlet, a hole may need to be cut in the side of the adjacent cabinet.

Installation Instructions


Fitting between existing cabinets

The height of the dishwasher, 845mm, has been designed to allow the machine to be fitted between existing cabinets of the same height in modern fitted kitchens. The feet can be adjusted so that correct height is reached. The laminated top of the machine does not require any particular care since it is heatproof, scratchproof and stainproof.



Underneath existing benchtop

"For installations under a continuous benchtop, remove the dishwasher's top cover. To do this, unscrew the fasteners located under the rear edge of the top panel (a).

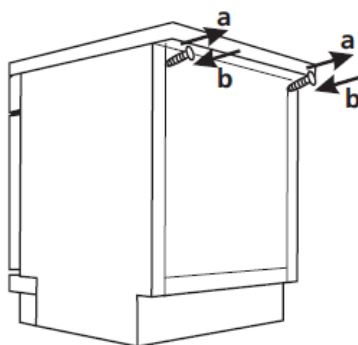

⚠️ Attentions:

- After removing the dishwasher's top panel, the screws must be reattached to the rear edge of the top (b).
- The height will then be reduced to 815mm, in accordance with International Regulations (ISO) allowing the dishwasher to fit perfectly under the kitchen benchtop.

Power connection

⚠️ Attention

For personal safety:

- Do not use an extension cord or an adapter plug with this appliance.
- Do not, under any circumstances, cut or remove the earthing connection from the power cord.

Please look at the rating label to know the rating voltage and connect the dishwasher to the appropriate power supply. Use the required fuse 10A, time delay fuse or circuit breaker recommended and provide separate circuit serving only this appliance.

Installation Instructions

⚠ Ensure that proper earthing exists before use.

Ensure the voltage and frequency of the power being corresponds to those on the rating plate. Only insert the plug into an electrical socket that is earthed properly. If the electrical socket is not appropriate for the plug, replace the socket, rather than using an adaptor or the like as they could cause overheating and burns.

Water supply connection

Connect the cold-water supply hose to a threaded 3/4(inch) connector and ensure it is fastened tightly in place. If the water pipes are new or have not been used for a long time, let the water run to ensure that it is clear. This step helps prevent blockage in the water inlet and protects the appliance from damage.



safety supply hose

The safety supply hose

The safety supply hose has double walls. It is designed to intervene by blocking the flow of water in the event of hose rupture or if the air gap between the inner hose and the outer corrugated hose fills with water.

⚠ Hoses attached to sink sprayers may burst if installed on the same water line as a dishwasher. If your sink is configured this way, we recommend disconnecting the hose and plugging the opening to prevent water damage.

How to connect the safety supply hose

1. Pull the safety supply hoses completely out from storage compartment located at rear of dishwasher.
2. Tighten the screws of the safety supply hose to the tap with thread 3/4 inch.
3. Turn water fully on before starting the dishwasher.

How to disconnect the safety supply hose


1. Turn off the water.
2. Unscrew the safety supply hose from the tap.

Installation Instructions

Connection of drain hose

Insert the drain hose into a drainpipe with a minimum diameter of 4cm, or let it run into the sink, ensure no bending or crimping. The drain hose cannot go over 1000mm in height. The free end of the hose must not be immersed in water to avoid the back flow.

⚠ Please securely fix the drain hose in either position A or position B

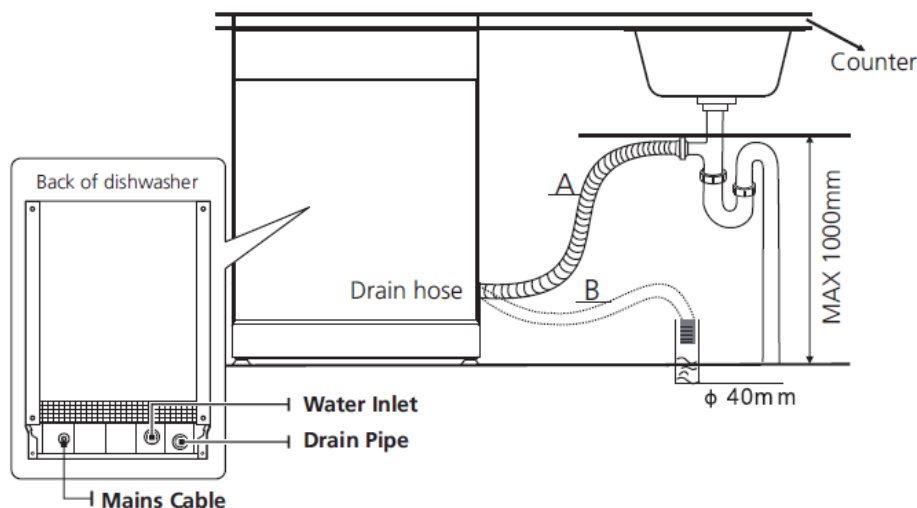

How to drain excess water from hoses

If the sink is over 1000mm high from the floor, the excess water in hose cannot be drained directly into the sink. It is necessary to drain excess water into a bowl or suitable container that is held outside and lower than the sink.

Water outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure the water drain hose is not kinked or squashed.

Extension hose


If you need a drain hose extension, ensure a compatible drain hose is used. It must be no longer than 4 meters; otherwise, the cleaning effect of the dishwasher could be reduced.

Syphon connection

The drain connection must be at a height less than 1000mm (maximum) from the bottom of the dishwasher. The water drain hose should be fixed in place.

Operating Instructions

Control panel

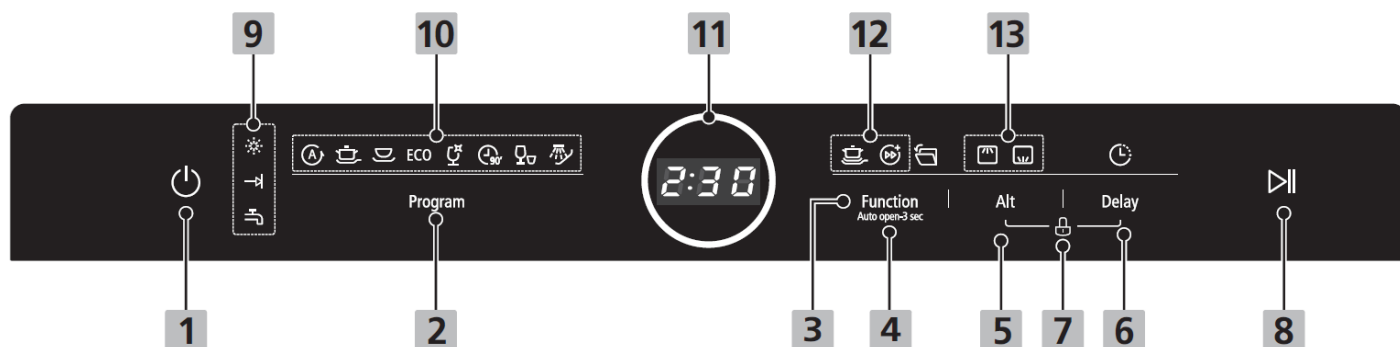

Operation (Button)


1 Power	Press this button to turn on your dishwasher.
2 Program	Press the button to select the appropriate washing program, the corresponding program indicator will be lit.
3 Function	Press the button to select a function button, corresponding indicator will be lit.
4 Auto Open -3 sec	Press and hold the function button for 3 seconds to enable or disable the Auto Open feature. The corresponding indicator “  ” will light up when the function is active. This feature is available only for the programs: Auto, Intensive, Heavy, ECO, Glass, 90min.
5 Alt	Press the button to select either upper basket or lower basket loaded, and the response indicator will be lit.
6 Delay	Press the button to increase the delay start time. Delay a cycle for up to 24 hours in one-hour increments. After setting the delay time, press the “Start/Pause” button to start.
7 Child Lock	This option allows you to lock the buttons on the control panel, so children cannot accidentally start the dishwasher by pressing the buttons on the panel. Only the “Power” button remains active. To lock or unlock the buttons on the control panel, press and hold the “Alt” button+ “Delay” button for 3 seconds simultaneously.
8 Start/Pause	Press to start the selected washing program or to pause it while the dishwasher is running.

Operating Instructions

9 Warning Indicator	 Rinse Aid The indicator lights up when the dishwasher is low on rinse aid and needs to be refilled.  Program End The indicator lights up when the program is finished.  Water Tap The indicator lights up when the tap is closed.
10 Program	Press the button to select the appropriate washing program, the corresponding program indicator will be lit.  Auto Intelligent sensor-controlled wash for lightly to heavily soiled crockery, with or without dried-on food residues.  Intensive For heavily soiled crockery, such as pots, pans, casserole dishes, and plates with dried-on food.  Heavy For heavily soiled loads, including pots, plates, glasses, and pans.  ECO This is the standard program, for moderately soiled loads, such as pots, plates, glasses, and lightly soiled pans. It is ideal for everyday use.  Glass For lightly soiled, delicate items that require a gentler wash.  90 min For lightly soiled plates and pans that need a quick wash.  Rapid A shorter wash for lightly soiled loads that do not need drying.  Soak To rinse dishes that you plan to wash later that day.
11 Screen	To show the Running Time, Delay Time, Error Code etc
12 Function Icon	 Power Wash Designed for heavily soiled and stubborn dishes. This function is ONLY compatible with the cycles: Intensive, Heavy, ECO, Glass, and 90 min.  Express Shortens the wash cycle time. This function is ONLY compatible with cycles: Intensive, Heavy, ECO, Glass, and 90 min.
13 Alt Icon	  Upper or Lower Activates only the selected rack's spray arm (upper or lower) for smaller loads. The unused nozzle will remain inactive during the cycle.

Operating Instructions


Before using dishwasher

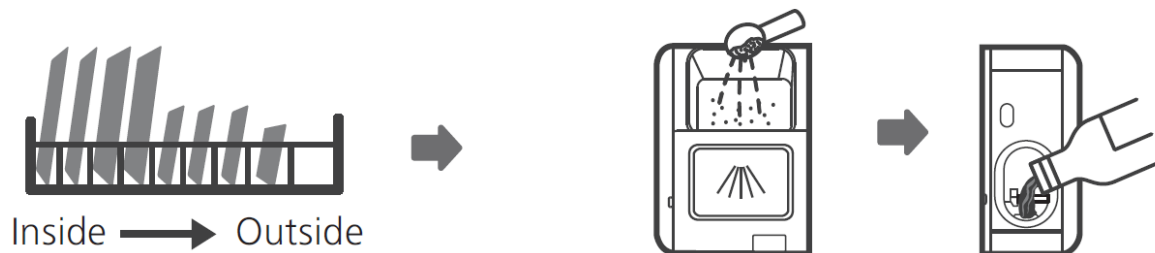

1. Load basket.
2. Fill rinse aid dispenser.
3. Add detergent.

Adjusting the upper basket

The height of the upper basket can be easily adjusted to accommodate taller dishes in either the upper or lower basket. To adjust the height of the upper rack, follow these steps:

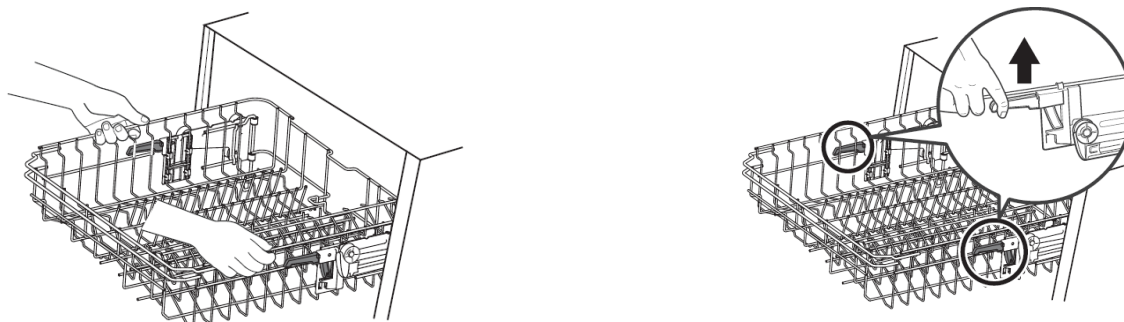

- 1**, To raise the upper basket, simply lift it by the centre of each side until it locks into the higher position. There is no need to use the adjuster handles.
- 2**, To lower the upper basket, lift the adjustment handles on both sides to release the basket, then guide it down to the lower position.

Folding back the cup shelves


To make space for taller items in the upper basket, raise the cup rack upwards. You can then lean the tall glasses against it. You can also remove it when it is not needed.



Operating Instructions

Folding back the rack shelves

The tines of the lower basket are designed to hold plates and a platter. They can be folded to make more space for large items.

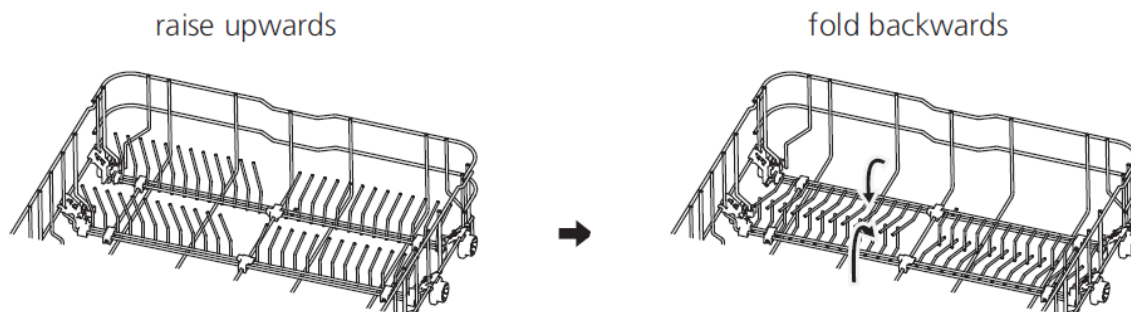

Preparing and loading dishes

- Use utensils labelled as dishwasher safe.
- For specific items, select a program with the lowest possible temperature.
- Allow glassware and cutlery to cool before removing them to prevent damage.

Items not recommended for dishwasher use:

- Cutlery with wooden, horn china or mother-of-pearl handles
- Plastic items that are not heat resistant
- Older cutlery with glued parts that are not temperature resistant
- Bonded cutlery items or dishes
- Pewter or cooper items
- Crystal glass
- Steel items subject to rusting
- Wooden platters
- Items made from synthetic fibres

Items to use with caution:

- Certain types of glassware may become dull after numerous washes.
- Silver and aluminium components may discolour during washing.
- Glazed patterns can fade with frequent washing.

Operating Instructions

Loading the dishwasher

- Scrape off large food scraps and pre-soak any stubborn, burnt-on residues in pans. No need to rinse dishes under running water.
- Items such as cups, glasses, pots/pans, etc. must face downwards.
- Curved items, or ones with recesses, should be loaded aslant so that water can run off.
- All utensils are stacked securely and cannot tip over. All utensils are placed in the way that the spray arms can rotate freely during washing.
- Load hollow items such as cups, glasses, pans etc. with the opening facing downwards so that water cannot collect in the container or a deep base.
- Dishes and items of cutlery must not lie inside one another or cover each other.
- To avoid damage, glasses should not touch one another.
- The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and teacups.
- Long bladed knives stored in an upright position are a potential hazard! Long and / or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.
- Do not overload your dishwasher. This is important for good results and for reasonable consumption of energy.
- Very small items should not be washed in the dishwasher as they could easily fall out of the basket.

Unloading the dishes

To prevent water from dripping from the upper basket onto the items in the lower basket, we recommend emptying the lower basket first, followed by the upper basket.

⚠ Items will be hot. To prevent breakage or injury, allow glassware and cutlery to cool for about 15 minutes after the program has finished.

Loading the upper basket

The upper basket is designed to hold more delicate and lighter dishware, such as glasses, coffee and teacups, saucers, as well as plates, small bowls, and shallow pans (if they are not heavily soiled). Arrange the dishes and cookware securely to prevent them from being displaced by water spray.



Loading the lower basket

Place large and heavily soiled items into the lower basket: such as pots, pans, lids, serving dishes and bowls. For optimal performance, position serving dishes and lids on the side of the racks to avoid obstructing the rotation of the top spray arm. The maximum diameter for plates placed in front of the detergent dispenser is 19cm, to ensure the dispenser opens fully and functions correctly.



Loading the cutlery basket

Cutlery should be placed in the cutlery basket. Ensuring each piece is positioned appropriately. Avoid nesting the cutlery together to prevent insufficient cleaning performance.

⚠ Do not let any item extend through the bottom. Always load sharp utensils with the sharp point facing down!




Operating Instructions

Use of detergent and rinse aid

Detergent


The chemical ingredients in the detergent are essential for breaking down, dissolving, and removing all dirt from the dishwasher. Most commercially available detergents are effective for this purpose.

- Use only detergent specifically made for dishwashers use. Keep your detergent fresh and dry.
- Do not fill detergent into dispenser until you are ready to start the dishwasher.
-  Dishwasher detergent is corrosive! Keep it out of the reach of children.

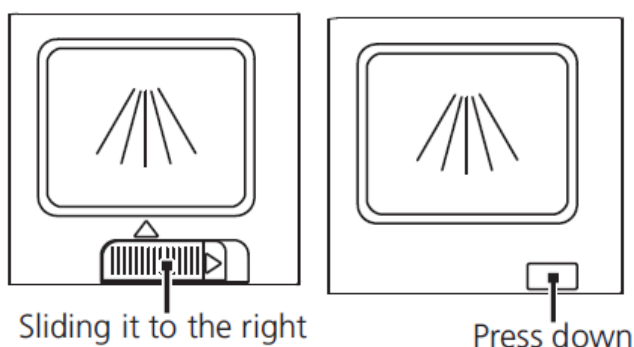

1, Open the cover by sliding or pressing the release catch. (The opening method may vary slightly depending on the dispenser version supplied.)

2, Add detergent into the main wash compartment (A). For superior cleaning results, especially with heavily soiled items, pour a small amount of powder/liquid detergent onto the door (B). This additional detergent will be utilized during the pre-wash phase.

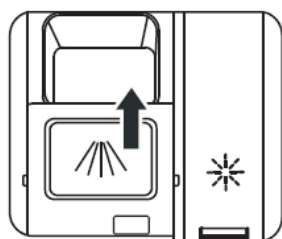

3, Close the cover by sliding it to the front and then pressing it down.

Note:

- The settings may vary depending on the water hardness.
- Refer to the detergent manufacturer's instructions for the recommended usage.


Operating Instructions

Rinse aid


Rinse aid is released during the final rinse to prevent water droplets from forming on your dishes, which can leave spots and streaks. It facilitates faster drying by helping water flow off the dishes. This unit is designed for use with liquid rinse aids ONLY.

⚠ Only use branded rinse aid. Never fill the rinse aid dispenser with any other substances, such as dishwasher cleaning agent or liquid detergent, as this would damage the appliance.


The frequency of refilling the dispenser depends on your washing habits and the selected rinse aid setting. The low rinse aid indicator (✱) will illuminate when a refill is required. Do not overfill the rinse aid dispenser, as this may cause excessive foaming.

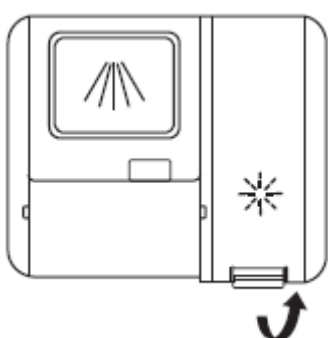

1, Remove the rinse aid reservoir cover by lifting the handle.

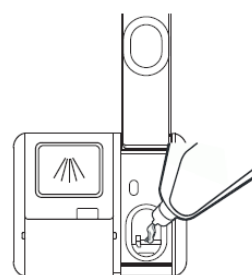

2, Carefully pour the rinse aid into the reservoir, ensuring it does not overflow.

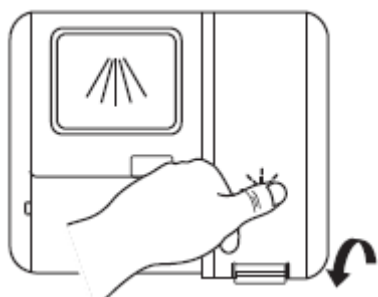

3, Close the rinse aid reservoir cover.

Note:

Wipe off any spilled rinse aid with an absorbent cloth to prevent excessive foaming during the next wash.

Adjusting the rinse aid reservoir

To achieve optimal drying performance with efficient rinse aid consumption, the dishwasher allows the user to adjust the dosage. Please follow the steps below:

1. Close the door and switch on the appliance.
2. Within 60 seconds, press and hold "Program" button for 5 seconds. The rinse aid indicator will flash (1 flash/sec) to enter the set mode.
3. Press the "Program" button again to cycle through settings: d3->d4->d5->d1->d2->d3. (Higher numbers dispense more rinse aid.)
4. Press "Power" button or wait 5 seconds to save and exit.

Operating Instructions

Wash cycle table

The table below indicates the most suitable programs for different levels of food residue, the required amount of detergent, and other program-related information. Except for the ECO program, consumption values and program durations are indicative ONLY.

“●” indicates that the program uses rinse aid during the final rinse.

Program	Description Of Cycle	Detergent Pre/Main	Running Time(min)	Energy (Kwh)	Water (L)	Rinse Aid
 Auto	Pre-wash(45°C) Autowash (45-55°C) Rinse Rinse(65°C) Drying	<u>5/28.75g</u> (1piece)	150	0.9 -1.3	11-15	●
 Intensive	Pre-wash(50°C) Wash(62°C) Rinse Rinse Rinse(70°C) Drying	<u>5/28.75g</u> (1piece)	175	1.4	17.5	●
 Heavy	Pre-wash(45°C) Wash(55°C) Rinse Rinse(65°C) Drying	<u>5/28.75g</u> (1piece)	185	1.1	13.5	●
ECO (*AS/NZS 2007.1)	Pre-wash Wash(47°C) Rinse(44°C) Drying	<u>5/28.75g</u> (1piece)	195	0.62	12.0	●
 Glass	Pre-wash Wash(40°C) Rinse Rinse(60°C) Drying	<u>5/28.75g</u> (1piece)	130	0.75	13	●
 90 Min	Wash(65°C) Rinse Rinse(65°C) Drying	<u>33.75g</u> (1piece)	90	1.15	12.5	●
 Rapid	Wash(45°C) Rinse(55°C) Rinse(55°C)	20g	30	0.7	11	○
 Soak	Prewash		15	0.02	4	○

Note:

1, This program (ECO) is the test cycle used for comparability testing in accordance with standard AS/NZS 2007.1

2, The cycle time of ECO (195 min) is an estimate based on standard conditions. The actual duration may vary up to 200 minutes depending on water inlet temperature, water pressure, and the actual load.

Operating Instructions

Starting a program


1. Pull out the lower and upper baskets, load the dishes, and push the baskets back into place. It is recommended to load the lower basket first and then the upper one.
2. Add detergent.
3. Ensure the water supply is turned on.
4. Close the door and press the power button.
5. Select a program; the indicator light will light up. Press the “Start/Pause” button to begin the cycle.

Changing the program during mid-cycle

A program can only be changed if it has been running for a short period of time. If the cycle has progressed too far, the detergent may have already been released or the wash water containing detergent may have been drained. In such cases, the dishwasher must be reset, and the detergent dispenser should be refilled.

To reset the dishwasher, follow these steps:


1. Press the “Start/Pause” button to pause the cycle.
2. Press and hold the “Program” button for more than 3 seconds to enter program selection mode.
3. Select a new program and press “Start/Pause” button to confirm.

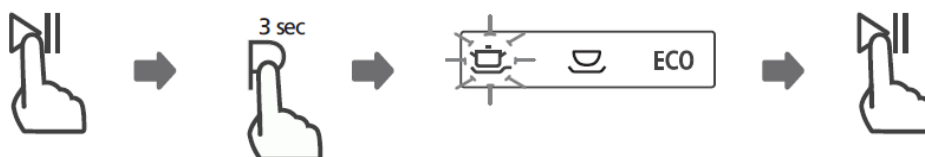

Adding forgotten tableware

You can add forgotten tableware before the detergent dispenser opens:

1. Press the “Start/Pause” button to pause the wash cycle.
2. Wait for 5 seconds to open the door.
3. Add the forgotten tableware.
4. Close the door securely.
5. Press the “Start/Pause” button; the dishwasher will resume operation after 10 seconds.

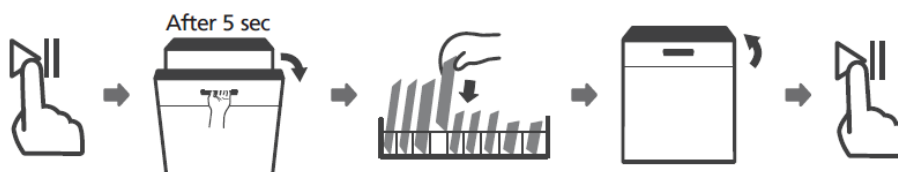

Note:

- It is dangerous to open the door mid-cycle, as hot steam may scald you.
- After the wash cycle, the door opens automatically to enhance drying performance.
- ⚠ Ensure the door is not obstructed when the Auto-Open feature is active. Blocking the door may damage or disrupt the door lock mechanism.



Care and Maintenance

External care

The door and door seal

Clean the door seals regularly with a soft, damp cloth to remove food residue. When loading, food and drink may drip onto the door. These areas aren't cleaned by the spray arms, so wipe them off before closing the door.

The control panel

Clean the control panel with a soft, damp cloth only.

- ⚠ Do not use spray cleaners to avoid getting water into the door lock and electrical parts.
- ⚠ Avoid abrasive cleaners or scouring pads on the outside, as they can scratch the surface. Some paper towels may also scratch or leave marks on the surface.


Internal care

Filtering system


The filter at the bottom of the wash cabinet captures large residue during the wash cycle. Over time, this residue may clog the filter. Check the filter regularly and clean it under running water if needed.

Note:

The diagrams are for reference only; filter systems and spray arms may vary between models.

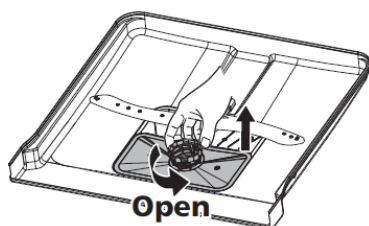


1, Hold the coarse filter, turn it anticlockwise to unlock, lift it upwards and remove it out of the dishwasher.

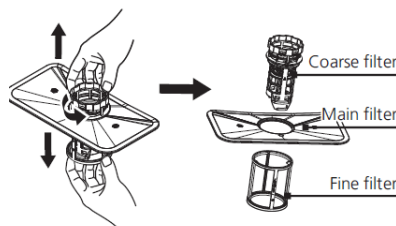

2, The fine filter can be pulled off the bottom of the filter assembly. To detach the coarse filter, gently squeeze the tabs at the top and pull it away from the main filter.



3, Larger food residue can be removed by rinsing the filter under running water. For more thorough cleaning, use a soft cleaning brush.

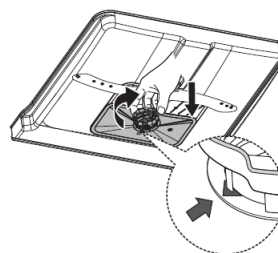

4, Reassemble the filters in the reverse order of the disassembly, replace the filter insert, and rotate clockwise to the close arrow.


Note:

- Do not overtighten the filters. Ensure the filters are reinstalled securely in the correct order to prevent coarse residue from entering the system and causing blockages.
- Never operate the dishwasher without the filters in place. Improper filter installation may reduce the dishwasher's performance and damage dishes and utensils.


Care and Maintenance

Spray arms


It is important to clean the spray arms regularly, as hard water can clog the spray arm jets and bearings. Follow the instructions below to clean the spray arms:

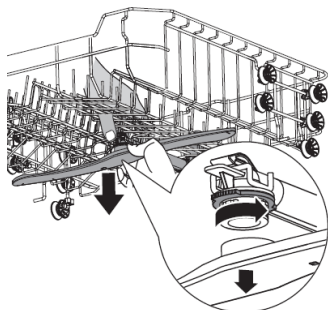

1, To remove the upper spray arm, hold the centre nut in place and rotate the spray arm anticlockwise to detach it.

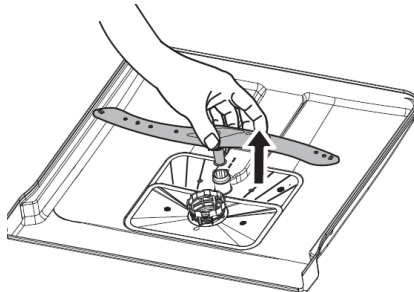

2, To remove the lower spray arm, pull it upwards.

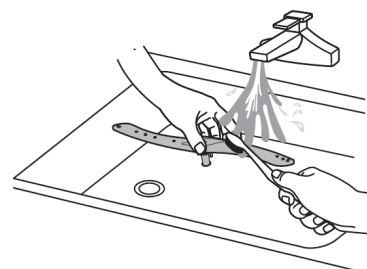

3, Wash the arms in soapy and warm water and use a soft brush to clean the jets. Replace them after rinsing them thoroughly.

Caring for the dishwasher

Frost protection

In winter, take the following steps after each wash:

1. Turn off the power to the dishwasher.
2. Shut off the water supply and disconnect the inlet pipe.
3. Drain the water from the pipe and valve (use a pan to collect it).
4. Reconnect the inlet pipe.
5. Remove the filter and use a sponge to soak up any remaining water.

After each wash

Turn off the water and leave the door slightly open to prevent moisture and odours.

Unplug before cleaning

Always unplug the dishwasher before cleaning or maintenance.

Use mild cleaners only

Wipe the exterior and seals with a soft cloth and warm, soapy water. For interior stains, use a cloth with vinegar and water or a dishwasher cleaner.

If not in use for a long time

Run an empty cycle, unplug the dishwasher, turn off the water, and leave the door slightly open to prevent odours and extend the life of the seals.

Moving the dishwasher

Keep the dishwasher upright while moving. If necessary, it can be laid on its back.

Seals maintenance

Clean the seals with a damp sponge regularly to avoid food buildup and odours.

Troubleshooting

If there is a problem, check the chart below to see if you can fix it. If the problem cannot be fixed or persists, call your authorised repairer or our customer service.

Problem	Possible Cases	What To Do
Dishwasher doesn't start	Fuse blown or circuit breaker tripped.	Replace the fuse or reset the circuit breaker. Remove other appliances sharing the same circuit.
	Power supply is not turned on.	Ensure the dishwasher is turned on and the door is closed securely. Ensure the power cord is properly plugged into the wall socket.
	Water pressure is low.	Check that the water supply is connected properly, and the water is turned on.
	Door not properly closed.	Close the door securely, latch it properly.
Water not pumped from dishwasher	Twisted or trapped drain hose.	Check the drain hose.
	Filter clogged	Check the coarse filter.
	Kitchen sink clogged	Check the kitchen sink to ensure it is draining properly. If the sink is clogged, you may need a plumber instead of a dishwasher technician.
Suds in the tub	Wrong detergent	Use only dishwasher detergent to prevent suds. If the suds appear, open the dishwasher to let them evaporate. Add 1 gallon of cold water to the bottom of the dishwasher, then close the door and select any cycle. The dishwasher will drain the water first. Once the draining is complete, open the door and check if the suds are gone. Repeat if necessary.
	Spilled rinse-aid.	Always wipe up rinse-aid spills.
Stained tub interior	Coloured detergent may have been used.	Ensure that the detergent does not contain any colorant.
White film on the interior surface	Hard water minerals	To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Avoid using any cleaner other than dishwasher detergent, as it may cause foaming or suds.
There are rust stains on cutlery.	The affected items are not corrosion resistant.	The items should be corrosion resistant.
Knocking noise in the dishwasher	A spray arm is knocking against an item in a basket	Pause the program and rearrange any items blocking the spray arm.
Rattling noise in the dishwasher	Items are loose in the dishwasher	Pause the program and rearrange the items.

Troubleshooting

Problem	Possible Causes	What to Do
Knocking noise in the water pipes	This may be caused by the installation process or the pipe's cross-sectional design	This does not affect the dishwasher's performance. If you're unsure, contact a qualified plumber.
The dishes are not clean	The dishes were not loaded correctly.	Refer to loading section
	The program was not powerful enough.	Select a more intensive program.
	Not enough detergent was dispensed.	Use more detergent or try a different detergent.
	Items are blocking the movement of the spray arms.	Rearrange the items to ensure the spray arms can rotate freely.
	The filter combination is not clean or not properly fitted. This may block the spray arm jet.	Clean the filter and/or ensure it is correctly fitted. Clean the spray arm jets as well.
Cloudy glassware	This may be caused by using too much detergent with soft water	Use less detergent and select a shorter wash cycle for better results.
Black or grey marks on dishes	Aluminium utensils have rubbed against dishes	Use a mild abrasive cleaner to eliminate those marks.
Detergent left in dispenser	Dishes may block detergent dispenser	Reload properly
The dishes aren't drying	Improper loading	Load the dishwasher as recommended in the instructions
	Too little rinse-aid	Increase the rinse-aid amount or refill the dispenser.
	Dishes removed too soon	Do not empty the dishwasher immediately after the washing cycle. Open the door slightly to let the steam escape. Wait until the interior is cool enough to touch. Unload the lower basket first to avoid water dripping from the upper basket
	Wrong program	Short programs have lower washing temperatures, reducing cleaning performance. Select a program with a longer washing time for better results.
	Low-quality coated cutlery	These items make water drainage harder and are not suitable for dishwasher use.

Troubleshooting


Error codes

If a malfunction occurs, the dishwasher will display an error code. The table below lists possible error codes and their causes.

Codes	Meanings	Possible Causes
E1	Water intake timeout	Tap is not turned on, water intake is restricted, or water pressure is too low.
E3	Heating timeout	Heating element malfunction.
E4	Overflow	Leakage detected in a dishwasher component.
E8	Diverter valve position error	Open circuit or broken diverter valve.
E9	Touch button stuck	Water or residue detected in the control panel area.
Ed	Communication error	Communication failure between the main control board and the display board.
Ec	Washing control system failure	Control board or motor failure.

- ⚠ If an overflow occurs, turn off the main water supply before contacting service.
- ⚠ If there's water in the bottom tray due to overfill or a small leak, remove it before restarting the dishwasher.
- ⚠ For unresolved error codes, please seek professional.

Technical Information

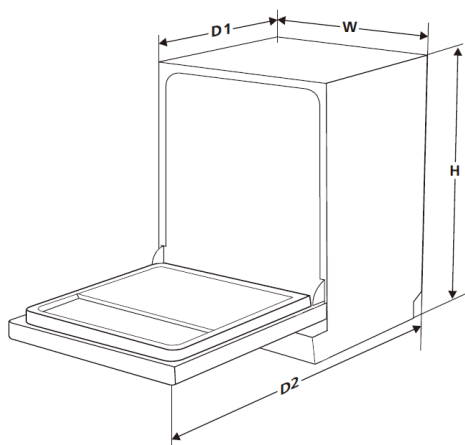

Model Number	ODW6015XDC (Stainless Steel DC Motor) ODW6015BXDC(Black Stainless Steel DC Motor)		
Height(H)	845mm		
Width(W)	598mm		
Depth(D1)	600mm (with the door closed)		
Depth(D2)	1175mm (with the door opened 90°)		
Standard place settings	15		
Standard cleaning cycle	ECO		
Energy consumption of the standard cleaning cycle	0.62kWh		
Water consumption of the standard cleaning cycle	12.0liters		
Energy efficiency class	★★★★☆ 4		
Water consumption class	★★★★☆ 5		
Program duration of the standard cleaning cycle	200min		
Noise level	42dB(A) re 1pW		
Mounting	Freestanding		
Can be built-in	YES		
Power consumption	1760-2100W		
Rated voltage / frequency	AC 220-240V/50Hz		
Water pressure	0.04-1.0MPa		

New Zealand Product Warranty Statements of Standard Warranty Conditions

New Zealand Customers

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993.

Our Warranty

This product is also covered by the manufacturer's warranty set out in this document (Our Warranty).

Our Warranty is for a period of forty-eight (48) months from the date of purchase. This is in addition to (and does not exclude, restrict or modify) any rights or remedies to which you may already be entitled under the New Zealand Consumer Guarantee Act 1993 relating to this product. Our Warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defective materials or components, or faulty workmanship. The product will be repaired or replaced at the option of Omega, and all costs of installation, removal, cartage, freight travelling expenses and insurance are to be paid by the customer.

Our Warranty is subject to the following conditions:

1. That the purchaser contact Omega prior to any product repair.
2. That the purchaser carefully follows all instructions provided with the product and complies with all relevant electrical & plumbing regulations in their State when installing the product.
3. That the purchaser carefully follows the instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the DOMESTIC use for which it has been designed. If the appliance is used in commercial applications or for rental purposes, Our Warranty is limited to a warranty of Twelve (12) months covering all parts with Three (3) months on any labour cost of service or repair.

Service Area

The provision of service under Our Warranty is limited by the boundary / territory area of the nearest service centre. Travelling cost incurred for service outside this area is not covered by Our Warranty

and service will incur commercial cost to be paid by the customer regulated by the number of kilometres travelled beyond the service area. These costs will be disclosed to you for acceptance by you prior to your claim being processed. Microwave ovens must be returned to your nearest Authorised Service Centre for repair as they are a carry in serviceable appliance.

What is Covered by our Warranty

During the warranty period, Omega or its authorised Service Centre will, at no extra charge, if your appliance is readily accessible without the need of special equipment and subject to the terms and conditions of this warranty, repair or replace any parts which it considers defective.

What is not Covered by our Warranty

1. Products installed damaged or incomplete or not in compliance with the relevant electrical & plumbing regulations in their State.
2. Normal wear and tear eg. cleaning, light globes, filters etc.
3. Failure resulting from power surges and electrical storms.
4. Insect or vermin infestation.
5. Unauthorised repairs or use of non-genuine Omega parts.
6. Any failure caused by the product not being used in accordance with the instruction and the installation manual provided with the product.
7. Misuse or abuse, including failure to properly maintain or service.
8. The clearing of blockages in pumps and hoses.
9. Damage which occurs during delivery or installation.
10. Claims to product surface coating due to liquid or solid spillovers, accidental damage or damage caused from cleaning products not recommended by Omega.

How to Claim Our Warranty

To make a claim under Warranty you will need to contact Omega in New Zealand by using the contact details below.

If you are contacting Omega regarding any warranty claims and spare parts inquiries, please ensure you have the following information on hand:

1. Product Name/Model Number
2. Serial Number/s
3. Purchase Date (as per invoice or proof of purchase)
4. Purchased From
5. Warranty Registration Number (if registered)

Contact Us New Zealand

Omega is a division of Monaco Corporation (member of Shriro)

Phone: 09 415 6000

Email: customercare@monacocorp.co.nz



omega

omegaappliances.co.nz