


Instruction Manual

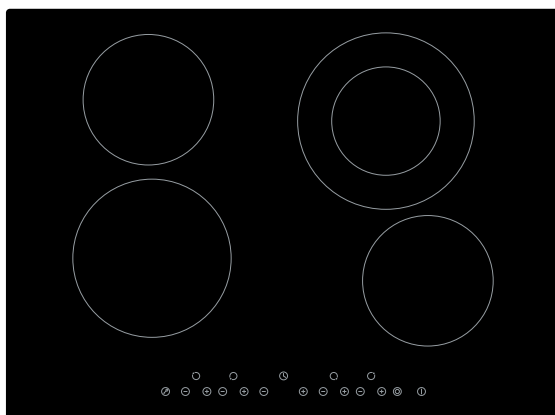

Model:OCC70TZ

Thank you for introducing our family to yours

At Omega, we understand that cooking, cleaning and washing may not be your favourite things in the world. That's why we created a range of no-nonsense, reliable products that always get the job done for you. With the features you need and nothing you don't. What's more, they're made to fit perfectly into your home life and your wallet. You are welcoming an Omega appliance into your place and you can be sure it'll always serve you well.

We aim to simplify any further appliance purchases. When researching our products you will find a range of icons that visually represent our products key features. Visit our website to learn more about these icons and the features and benefits of our products.

For important information such as instruction manuals, specifications and catalogues, please visit omegaappliances.com.au/customer (for Australia) or omegaappliances.co.nz/customer (for New Zealand). Also, make sure you activate your product warranty by registering your warranty online using the links above.

We value your opinion, so please take a few minutes to tell us what you think about your new addition! Simply go to the relevant appliance page of our website omegaappliances.com.au and click on "Write a Review".

If you want to know more about promotions, receive cool tips and tailor made content or just connect with us on social media, like [omegaappliances](https://www.facebook.com/omegaappliances) on Facebook and follow [omegaappliances_au](https://www.instagram.com/omegaappliances_au) on Instagram.

Enjoy your new appliance and remember, we're only one click away!



omegaappliances.com.au / omegaappliances.co.nz



[omegaappliances](https://www.facebook.com/omegaappliances)



[omegaappliances_au](https://www.instagram.com/omegaappliances_au)

omega. Always serves you well.

Product Introduction

The microcomputer ceramic cooker hob can meet different kinds of cuisine demands because of resistance wire heating, micro-computerized control and multi-power selection, really the optimal choice for modern families.

The ceramic cooker hob centers on customers and adopts personalized design. The hob has safe and reliable performances, making your life comfortable and enabling to fully enjoy the pleasure from life.

Safety

This hob was specially designed for domestic use.

In its constant search to improve its products, we reserve the right to modify any technical, programme or aesthetic aspects of the appliance at any time.

■ High temperature protection

The temperature sensor mounted on the heating element monitors the temperature inside the cooker from time to time. When an excessive temperature is detected, the heating element will stop power output.

■ Residual heat warning

When the hob has been operating for some time, there will be some residual heat. The letter "H" appears to warn you to keep away from it.

■ Auto shutdown

Another safety feature of the hob is auto shutdown. This occurs whenever you forget to switch off a cooking zone. The default shutdown times are shown in the table below:

Power level	1	2	3	4	5	6	7	8	9
Default working timer(hour)	8	8	8	4	4	4	2	2	2

Installation

■ Selection of installation equipment

Drill holes on the table surface according to the sizes shown in the drawing. For the purpose of installation and use, a minimum of 5 cm space shall be preserved around the hole.

Be sure the thickness of the table surface is at least 30mm. Please select heat-resistant table material to avoid larger deformation caused by the heat radiation from the hotplate.

As shown in Figure (1)

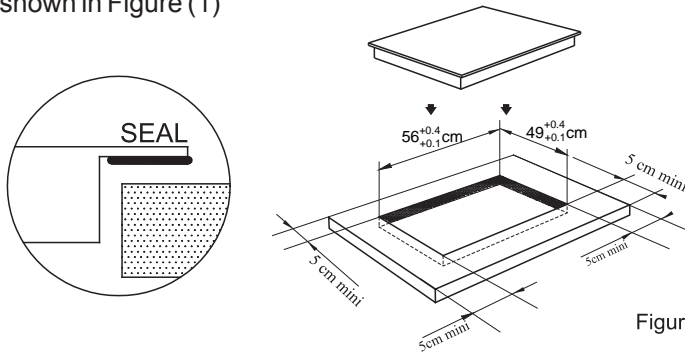


Figure (1)

Under any circumstances, make sure the ceramic cooker hob is well ventilated and the air inlet and outlet are not blocked. Ensure the ceramic cooker hob is in good work state. As shown in Figure (2)


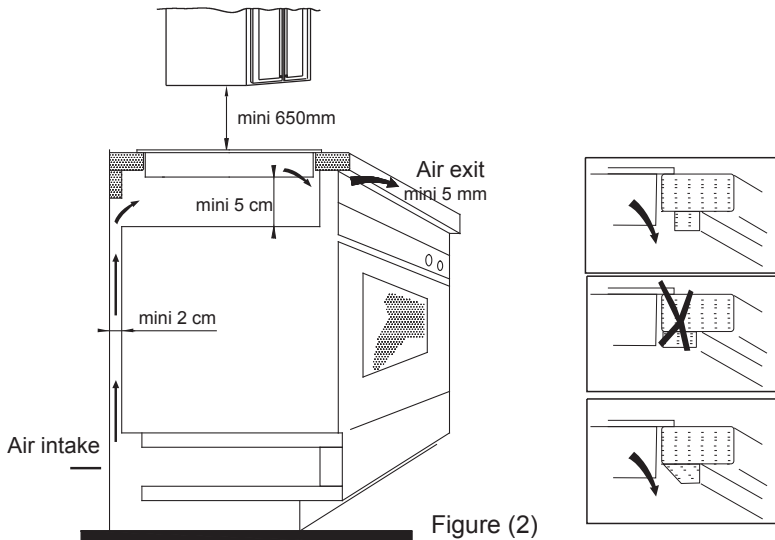


Figure (2)

Note: The exhaust fan should be at a minimum height of 650 mm from the cooktop.

Fix the hob on the table by screw four brackets on the bottom of hob (see picture) after installation. Adjust the bracket position to suit for different table top thickness.

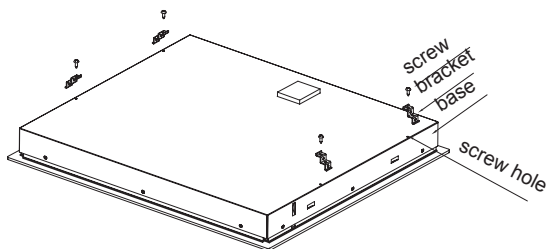


■ Cautions

1. The ceramic cooker hob must be installed by qualified personnel or technicians. We have professionals at your service. Please never conduct the operation by yourself.
2. The ceramic cooker hob shall not be mounted to cooling equipment, dishwashers and rotary dryers.
3. The ceramic cooker hob shall be installed such that better heat radiation can be ensured to enhance its reliability.
4. The wall and induced heating zone above the table surface shall withstand heat.
5. To avoid any damage, the sandwich layer and adhesive must be resistant to heat.
6. A steam cleaner is not to be used.
7. WARNING – The surface temperature of this appliance exceeds 95°C. To avoid a hazard, under bench access must be restricted. A board must be installed underneath the cooktop.

■ Connection to power supply

The socket should be connected in compliance with the relevant standard, or a single-pole circuit breaker. the method of connection is shown in Figure (3)

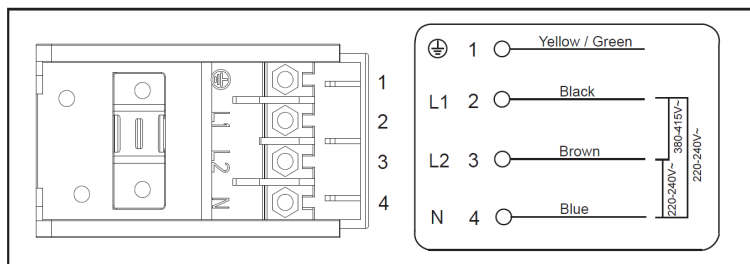


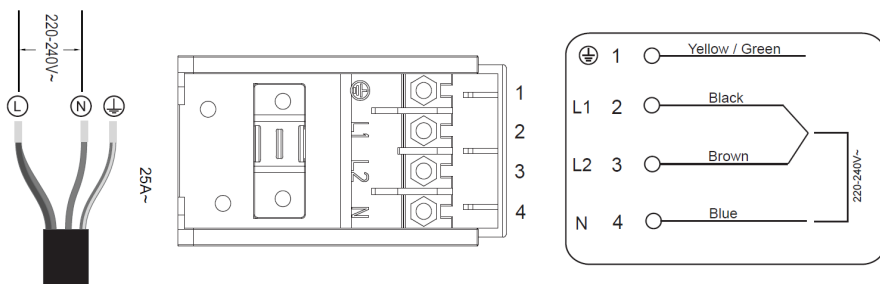



Figure (3)

1. If the cable is damaged or needs replacing, this should be done by an after-sales technician using the proper tools, so as to avoid any accidents.
2. If the appliance is being connected directly to the mains supply, an omnipolar circuit breaker must be installed with a minimum gap of 3mm between the contacts.
3. The installer must ensure that the correct electrical connection has been made and that it complies with safety regulations.
4. The cable must not be bent or compressed.
5. The cable must be checked regularly and only replaced by a properly qualified person.

The ceramic cooker hob appearance

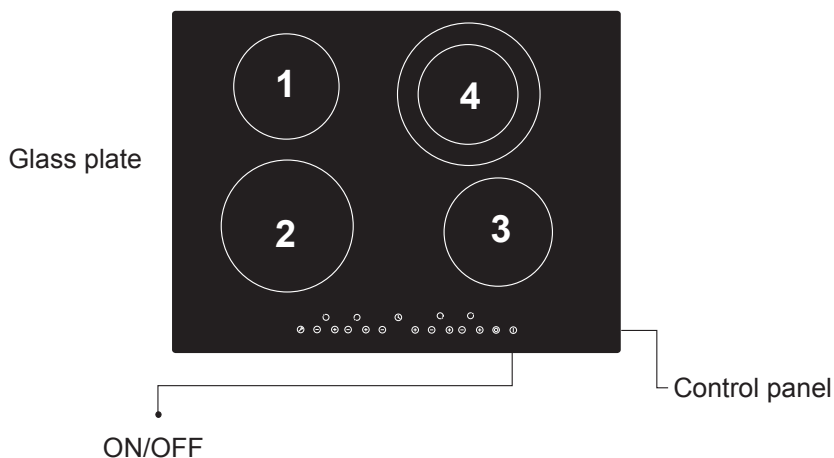

Schematic diagram of the control panel

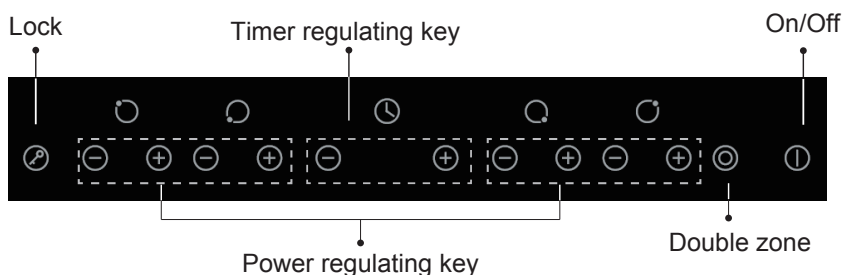

Instructions for Use

Preparation before using

When the power is switched on, the buzzer will sound once and all the indicators will come on for one second and go out. The hob is now in standby mode. Place the pan in the centre of the cooking zone.

Press the “①” key to turn on the hob, then the power indicators show “-” and the timer indicators show “--”, the hob is now ready for heating. Then press the “⊖” or “⊕” key for the corresponding cooking zone where there is a pan on it, the relevant hotplate will start heating. Its corresponding cooking zone indicator flashes “5” five seconds, when the other indicators show “-”. Select the power level by pressing the “⊖” or “⊕” key for the relevant hotplate.

Note:

1. When the “①” key is pressed, the hob returns to standby mode if no other operation is carried out within one minute.
2. Every cooking zone is independent of each other.

Double zone function

The hob is fitted with double zone

Activate the double zone

If you want to use larger heating zone, press the “⊗” when the hob is in working mode.

Deactivate the double zone

Press the “⊗” when the hob is working with double zone.

Note:

1. This function is available only in the right rear heating zone.
2. You can select the function from level 1 to level 9.

3. When the heating zone is in double loop working mode, the double loop indicator shows "P".
4. You can select the size of the heating zone according to the size of the pot.

Timer function

Cooking timer

First select the cooking zone by press the "-" or "+" of the relevant heating zone the cooking zone display flashes. Then adjust the timer by pressing the "-" or "+" of the timer. The timer is confirmed after the timer indicator flashes for 5 seconds. A red dot is displayed at the corresponding cooking zone indicator, indicating a cooking timer has been set for the cooking zone. When a cooking timer expires, the corresponding cooking zone will switch off automatically.

Note: Cooking timer only works for one cooking zone at the same time.

Minute Reminder

Timer can be used as a minute reminder.

Press the "+" or "-" of the timer and the timer indicator flashes "00". Adjust the timer by pressing the "+" or "-" of the timer. The timer is set when the timer indicator stops flashing 5 seconds after the last action, and the minute reminder starts. When the timer has finished, the buzzer will beep for 30 seconds and the timer indicator shows "--". The cooking zones are not affected by the minute reminder.


Timer cancellation

Press the "+" and "-" of the timer simultaneously. The timer is canceled and the timer indicator shows "--".


Lock Function

To ensure the safety of children, the hob is fitted with a lock device

Activating the lock function

Press the "", the hob then goes into lock mode, the timer shows "LO" and the rest of the keys are disabled except the ON/OFF keys.


Deactivating the lock function

Hold down the "" for several seconds and the hob will return to normal working.

The power of each cooking zone is as follows:

Heating zone	1	2	3	4	
				Inner	double
Power	1200W	1800W	1200W	1000W	2200W

Safety Reminding and Maintenance

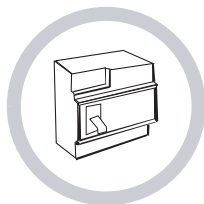

A dedicated power protection air switch with protection air switch must be incorporated in the fixed wiring in accordance with the wiring rules.



Never use the ceramic cooker hob in high temperature environments such as near a gas stove or kerosene stove.




Do not put any detergents or flammable materials in the equipment installed under the ceramic cooker hob.



Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.



For sealed foods such as canned goods, please do not heat them before opening their covers so as to avoid any dangers of explosion due to heating expansion.

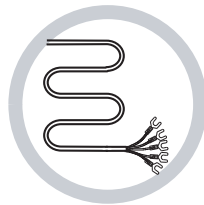

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Do not place rough or uneven appliances, which may damage the ceramic surface.



If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.



Never wash the induction cooker with water directly to avoid danger.




Never have the ceramic cooker hob to work without food inside, otherwise its operational performance may be affected and danger may happen.



After being used for a long time, the corresponding heating zone of the ceramic cooker hob is still hot. Never touch the ceramic surface to avoid burning.



Keep electrical appliance out of reach from children or inform person. Do not let them use the appliances without supervision.

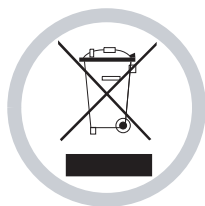

DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



Indoor use only.



Clean the ceramic cooker hob on a regular basis to prevent foreign matters from entering the fan thus influencing the normal operation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction, concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

The electrical connection must be accessible after installation. The appliance must be electrically isolated before any maintenance can be performed.

The appliance is not intended to be operated by means of an external timer or separate remote control system.

Cleaning may only be commenced on the appliance once it has cooled down and is turned off. Do not use a steam jet or any other high pressure cleaning equipment to clean the appliance.

WARNING - The cooktop will become hot during and directly after use. Do not touch the surface during this time, as it may be hot and can cause burns. To avoid burns, children should be kept away.

Where this appliance is installed in a caravan, it shall NOT be used as a space heater.

Cleaning and Maintenance

You can easily clean the surface of the ceramic cooker hob if following the methods given in the table.

Type of contamination	Method of cleaning	Articles used for cleaning
Light	Clean with hot water and damp sponge	Cleaning sponge
Accumulation of dirt	Clean with hot water and abrasive sponge	Special cleaning sponge for ceramic glass
Rings and lime crumbles	Apply white vinegar to the polluted zone, then wipe it dry with soft cloth or a special article available in local markets	Special adhesive for ceramic glass
Sweetmeat, melt aluminum or plastics	Use a scraper suitable for ceramic glass (to protect glass, a silicon product is preferred) to remove residuals	Special adhesive for ceramic glass

Hint: please disconnect power before the cleaning.

Maintenance Service Warranty

For any warranty issues, please contact your nearest Service Department. Please read the following warranty statement.



AUSTRALIAN & NEW ZEALAND PRODUCT WARRANTY STATEMENT OF STANDARD WARRANTY CONDITIONS

AUSTRALIAN CUSTOMERS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NEW ZEALAND CUSTOMERS

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993.

OUR WARRANTY

This product is also covered by the manufacturer's warranty set out in this document (Our Warranty).

Our Warranty is for a period of twenty four (24) months from the date of purchase and for refrigeration appliances will have an additional thirty six (36) months after the first twenty four (24) months on the Sealed System (PARTS only) Compressor & condenser etc. The labour cost to replace these parts is the responsibility of the customer.

This is in addition to (and does not exclude, restrict or modify) any rights or remedies to which you may already be entitled to under the Australian consumer law or the New Zealand Consumer Guarantee act 1993 relating to this product.

Our warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defective materials or components, or faulty workmanship. The product will be repaired or replaced at the option of Omega, and all costs of installation, removal, cartage, freight travelling and insurance are to be paid by the customer.

Our warranty is subject to the following conditions:

1. That the purchaser contact Omega prior to any product repair.
2. That the purchaser carefully follows all instructions provided with the product and complies with all relevant electrical & plumbing regulations in their State when installing the product.
3. That the purchaser carefully follows the instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the DOMESTIC use for which it has been designed. If the appliance is used in commercial applications or for rental purposes, Our Warranty is limited to a warranty of Twelve (12) months covering all parts with Three (3) months on any labour cost of service or repair.

SERVICE AREA

The provision of service under Our Warranty is limited by the boundary / territory area of the nearest service centre. Travelling cost incurred for service outside this area is not covered by Our Warranty and service will incur commercial cost to be paid by the customer regulated by the number of kilometres travelled beyond the service area. These costs will be disclosed to you for acceptance by you prior to your claim being processed.

Microwave ovens must be returned to your nearest Authorised Service Centre for repair as they are a carry in serviceable appliance.

WHAT IS COVERED: By Our Warranty

During the warranty period, Omega or its authorised Service Centre will, at no extra charge, if your appliance is readily accessible without the need of special equipment and subject to the terms and conditions of this warranty, repair or replace any parts which it considers defective.

WHAT IS NOT COVERED: By Our Warranty

1. Products installed damaged or incomplete or not in compliance with the relevant electrical & plumbing regulations in their State.
2. Normal wear and tear e.g. cleaning, light globes, filters etc.
3. Failure resulting from power surges and electrical storms.
4. Insect or vermin infestation.
5. Unauthorised repairs or use of non-genuine Omega parts.
6. Any failure caused by the product not being used in accordance with the instruction and the installation manual provided with the product.
7. Misuse or abuse, including failure to properly maintain or service.
8. The clearing of blockages in pumps and hoses.
9. Damage which occurs during delivery or installation.
10. Claims to product surface coating due to liquid or solid spill-overs, accidental damage or damage caused from cleaning products not recommended by Omega.

HOW TO CLAIM OUR WARRANTY

You will need to contact Omega in Australia or New Zealand by using the contact details below.

IN AUSTRALIA

Omega is a division of Shiro Australia Pty Ltd
ABN 28 002 386 129
Locked Bag 5002, Kingsgrove, NSW, 2208
Phone: 1300 795 572 Fax: 1800 686 413
Email: customer@shiro.com.au

Web: www.omegaplumbing.com.au

Note: Please complete the following details when you have unpacked the product:

IN NEW ZEALAND

Omega is a division of Monaco Corporation
(Member of Shiro Australia Pty Ltd)
PO Box 4399, Shortland St, Auckland, 1140
Phone: 09 415 6000 Fax: 09 415 7060
Email: service@shiro.com.au

Model No.

Serial No.

Date of Purchase

Retailer