



Before using your tumble dryer, please read this manual carefully and keep it for future reference.

Tumble Dryer

OWNER'S MANUAL

Read This Manual

Inside you will find many helpful hints on how to use and maintain your tumble dryer properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your tumble dryer. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of troubleshooting tips first, you may not need to call for service.



CAUTION: HOT SURFACE !















CAUTION: RISK OF FIRE !

Safety information.....	1
Installation.....	6
Attention and advice.....	7
Part description.....	8
Description of controls.....	10
Operation instruction.....	12
Programme table.....	13
Specialty drying function.....	14
Cleaning and routine maintenance.....	16
Error codes, solutions and precautions.....	17
Technical specifications.....	18

Laundry Symbols

Before placing clothes in this dryer, check for laundry symbols which may indicate the suitability of using this appliance:

 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

Safety notes



To prevent damage to your appliance and prevent personal injury, please read and follow the following safety information.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
2. In certain circumstances electrical appliances may be a danger hazard. Check the conformity of voltage and power settings, which are specified on the information plate attached to the appliance and/or packaging, with the usage conditions available.
3. Do not place heavy objects in or on these appliances, or use for storage, or let children play or swing from the door. Do not use the appliances until fully installed.
4. The electrical connection must be accessible after installation. The appliance must be electrically isolated before any maintenance can be performed. The appliance is not intended to be operated by means of an external timer or separate remote control system.

Safety information

- 23.If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 24.This appliance is for indoor use only.
- 25.The openings must not be obstructed by a carpet.
- 26.Children of less than 3 years should be kept away unless continuously supervised.
- 27.If the appliance appear high temperature abnormally , please draw the mail plug immediately.
- 28.The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.(This warning is not for EUROPEAN market)

Correct Disposal of this product:



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Safety information

Electric shock hazard

- 1.Do not draw the power cord forcefully to pull out the mains plug.
- 2.Please do not plug/draw the mains plug with wet hands.
- 3.Do not damage the power cord and the power plug.

Injury danger

- 1.Do not disassemble and install the dryer under no instruction or supervision.
- 2.Do not stack this dryer on washing machine without stacking kits.(if want stacking on washing machine, please purchase the Independent parts and it must be installed by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.)
- 3.Do not lean on the opened door of the dryer.
- 4.Do not put any pyrotoxin on the dryer, such as the candle, electric cooker.

Damage danger

- 1.Do not dry over the rated capacity.
- 2.Do not operate the dryer without the filter door and filter base.
- 3.Do not dry the clothes before being spun.
- 4.Do not expose the dryer directly under the sun, and indoor use only.
- 5.Do not install the dryer in the humid and drenching environment.
- 6.At the cleaning and maintenance, please do remember to pull out the power plug and do not directly wash the dryer with water.

Explosion danger

Please do not dry the clothes with some flammable substances such as the coal oil, alcohol or there will be the explosion.


Installation

Transport

Move cautiously. Do not grasp any salient parts of machine. The machine door can not be used as the handle for delivery. If the dryer can't be transported erect, the dryer could be slant to right less than 30° .


Installation Position

1. It is recommended that, for your convenience, the machine is positioned close to your washing machine.
2. The tumble dryer must be installed in a clean place, where dirt does not build up. Air must be able to circulate freely all round the appliance. Do not obstruct the front air inlet or the air intake grilles at the back of the machine.
3. To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm and level surface.
4. The feet must never be removed. Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.

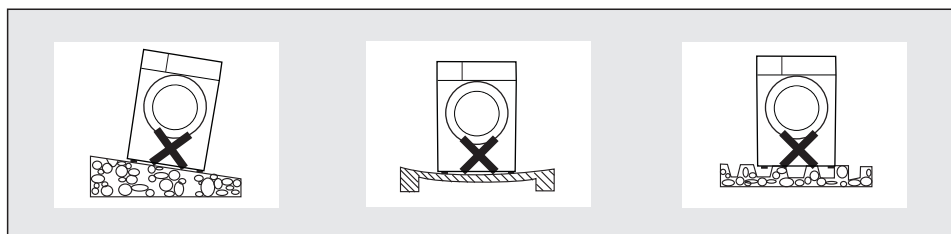

Level Adjusting

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, adjust the feet with a tool.

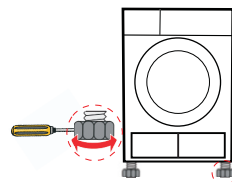

Power Supply Connection

1. Make sure that the voltage of the power supply is the same as the electric specification of the dryer.
2. Do not connect the dryer with the power connection board, the universal plug or socket.












Attention and Advice

Attention

- ❗ Leave it to stand for 2 hours after transporting. Before first use, please use the soft fabric to clean the inside drum.
 - a) Put some clean rags into the drum.
 - b) Plug the power, press **【On/Off】**.
 - c) Select the **【Refresh】** Programme, press **【Start/Pause】** button.
 - d) After finishing this programme, please follow the "cleaning and routine maintenance" (refer to page 15) to clean the filter door.
- ❗ During drying, the compressor and the water pump generate some noise which is entirely normal.


Advice

1. Before drying, thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
2. For uniform drying result, sort the laundry according to fabric type and drying programme.
3. Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
4. Do not over dry the clothes, because over dried clothes can easily get creases or shrinkage.
5. Do not dry the articles containing rubber or similar elastic materials such as raincoats, bicycle covers and etc.
6. The door can be opened only after the programme of the drying machine is completed. Do not open the door before the programme finished, as the skin may be scalded by steam or hot surface.
7. Clean the lint filter and empty container after each use to avoid extension of drying time and energy consumption.
8. Please choose the related programme when deal with wool material clothes, to make the cloth more fresh and fluffy.
9. The weight references as follows:

 Blended Coats (about 800g)	 Jackets (about 800g in cotton)	 Jeans Trousers (about 800g)	 Towel Quilts (about 900g in cotton)
 Single Sheets (about 600g in cotton)	 Work Clothes (upper and lower) (about 1120g in cotton)	 Pajamas (about 200g)	 Shirts (about 300g in cotton)
 Undershirts (about 180g in cotton)	 Underpants (about 70g in cotton)	 Socks (about 30g in blended material)	


Part description

Part Description

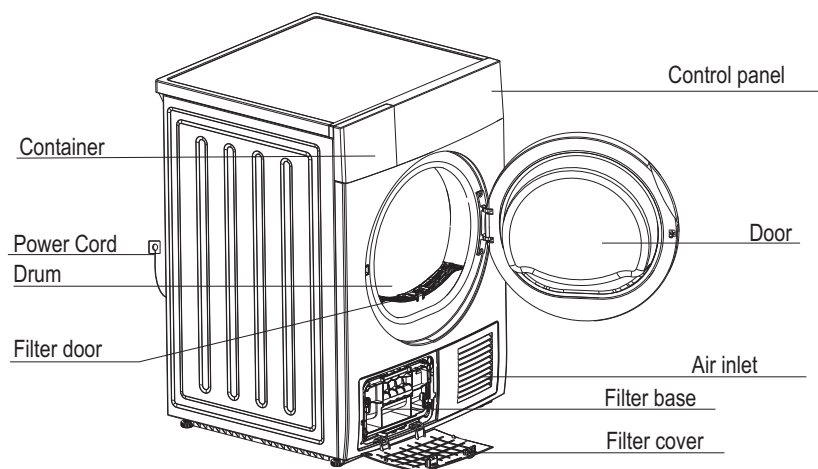


Accessories


The following parts are optional for specific models.
If your dryer has following parts, please install them following the instruction below .

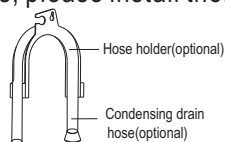

Installation step:

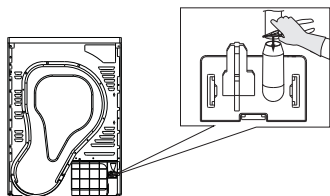



Step 1: removing the drain hose from the hose connector using plier.

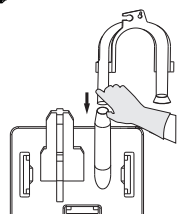


Step 2: insert the external drainage hose.

Part description


Step 3: put the hose holder on the washing basin or any other sink.

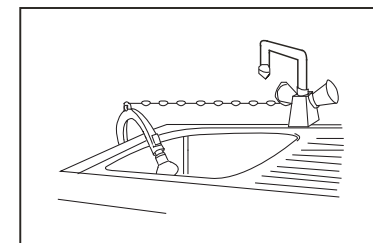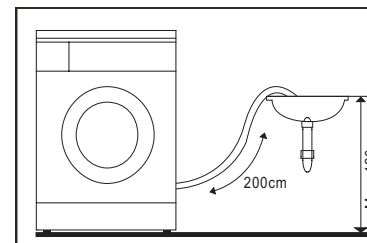

Quick start

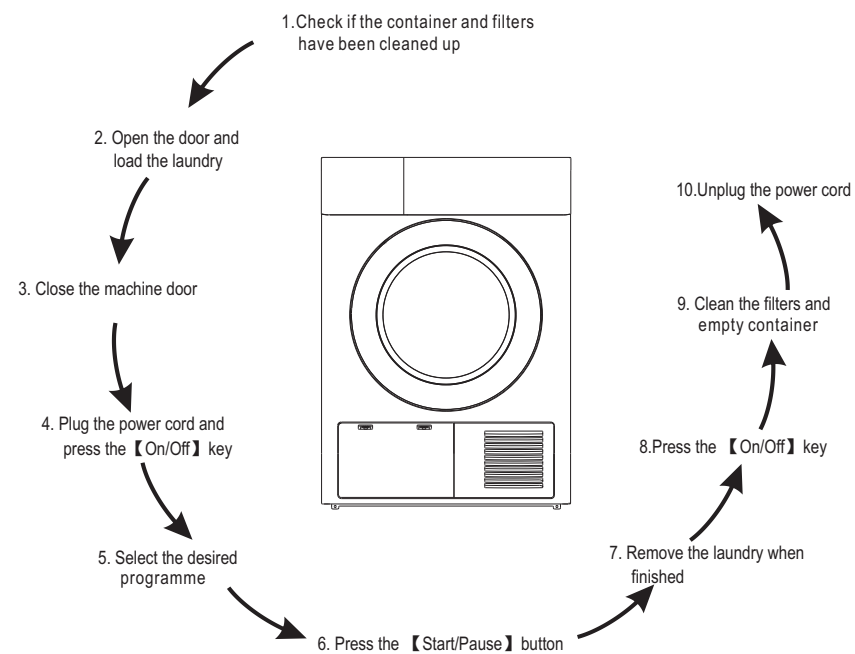

Description of controls

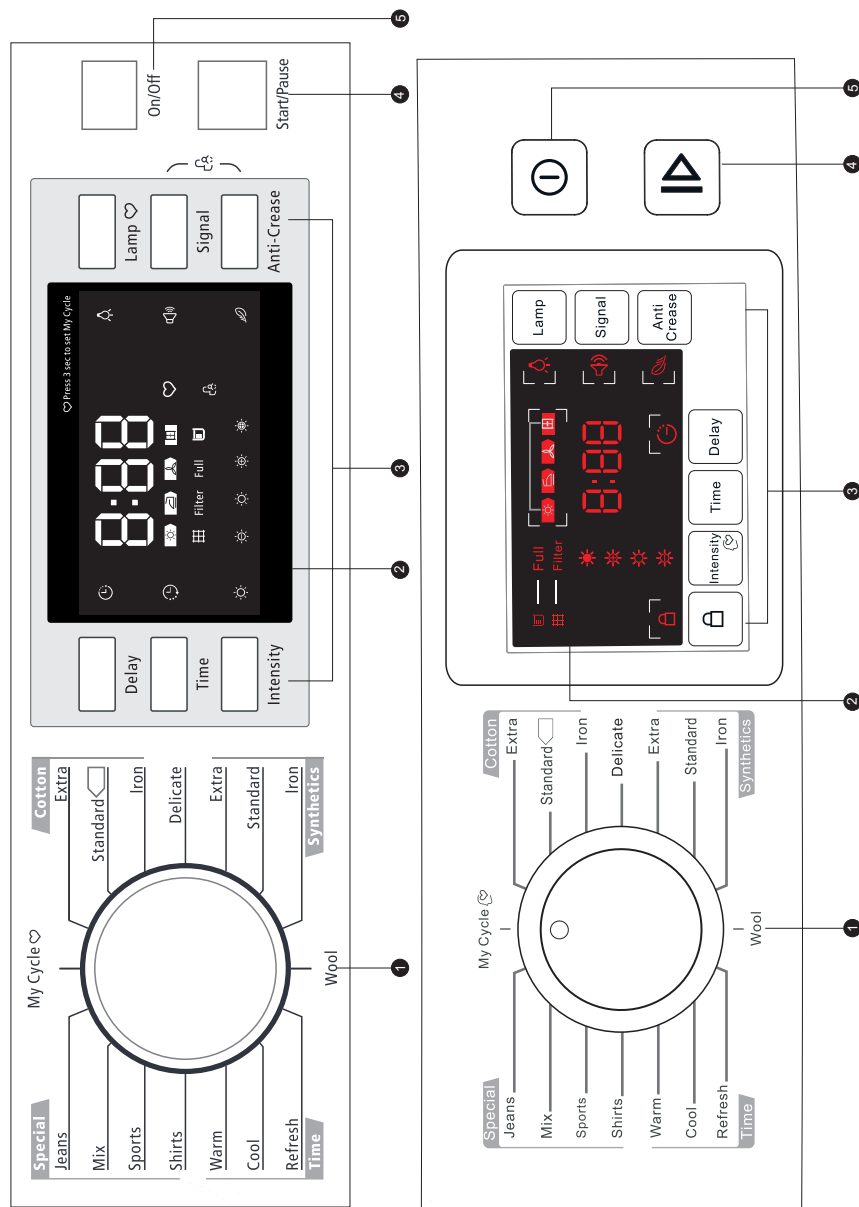

Description of controls

- 1.Programme Selection knob
- 2.Display
- 3.Specialty function buttons (Delay, Time, Intensity, Lamp, Signal, Anti-Crease, Childlock)
- 4.Start/Pause button
- 5.On/Off button

Display

	Delay start
	Time
	Child lock
	Remaining Time indicator/Error message
	Cycle phase status
	Clean filters (warning)
	Empty water container (warning)
	Dryness level (four grades)
	Drum lamp indicator
	Signal indicator
	Anti-crease mode

Select the programme

1. Press the **【On/Off】** key, when the LED display screen brighten up, rotate the programme knob to select the desired programme.
2. Select the **【Delay】**, **【Time】**, **【Intensity】**, **【Signal】** or **【Anti-Crease】** functions for additional option.
3. Press the **【Start/Pause】** key.

Programme start

The drum will keep rotating after the programme start, the state light in the display area will flash in sequence, the remaining time displayed will change automatically.

Note:

Occasionally, the drum might suspend about 40 seconds during the drying procedure, but the screen displays normal. The dryer is automatic adjustment in this time and will continue operation.

Programme end

1. The drum will stop running after the programme ends, the display will show “000”, the last cycle phase status light will flash. The dryer will start **【Anti-crease】** function if user doesn't remove the load in time (refer to page 13). Please press **【On/Off】** key to cut off power and pull the plug out.
2. Deal with the problem according to “Malfunction display and solutions”, if there is a unexpected stop during the drying procedure and the dryer show information (refer to page 16).

Programme table

Programme	Weight (max)	Application/Properties	Delay	Time
	For cottons and coloureds made of cotton or linen.			
Cotton	Extra	To dry cotton pieces of clothing. Drying level: extra dry.	Y	N
	Standard	To dry cotton pieces of clothing. Drying level: cupboard dry.		
	Iron	To dry cotton pieces of clothing. Drying level: applicable to iron.	Y	N
Delicate	Delicate	To dry delicate laundry that is suitable for drying or laundry which is advised to be hand-washed at a lower temperature.	Y	N
	For non-iron washing made of synthetic and blended fabrics, cotton.			
Synthetics	Extra	To dry thick or multi-layered synthetic fabrics. Drying level: extra dry.		
	Standard	To dry thin synthetic fabrics which are not ironed, such as easy care shirts, table linen, baby clothes, socks.	Y	N
	Iron	To dry thin synthetic fabrics which are also to be ironed, such as knitwear, shirts.		
Wool	Wool	For a fluffy and fresh wool clothing (Can not be used for drying wool clothing). When the cycle is done, take out the clothes at once, let them dry in the air.	Y	N
	Jeans	To dry jeans or leisure clothes that are spun at high speeds in the washing machine.		
	Mix	If you can not determine what the clothing's material is, please choose Mix.		
Special	Sports	To dry sportswear, thin fabrics, polyester, which are not ironed.	Y	N
	Shirts	For easy care clothes such shirts and blouses with anti-crease mechanism for minimum ironing effort. Place clothes loosely in the dryer. Once dried, hang it on a clothes hange		
My Cycle	My Cycle	Define and save you favorite programme.	—	—
Time	Warm	To warm clothes from minimum 10 min. to maximum 120 min. (in 10 min. steps).		
	Cool	To air clothes without blowing hot air from minimum 10 min. to maximum 30 min. (in 10 min. steps).	Y	Y
	Refresh	To refresh the clothes that have been kept at closed environments for a long time from minimum 20 min. to maximum 150 min. (in 10 min. steps).		

Note: 1. “Cotton+Extra” is for AS/NZS energy program.

2. The programmes above are only recommended for using, users can choose the appropriate programme according to the personal habits. Thick and multi-layered fabrics, e.g. bed linen, jeans, jackets etc, are not easy to dry, you'd better choose Jeans programme and maximum drying intensity level.

Specialty drying function

1. Instruction to the 【Delay】 drying procedure

To delay the drying programme from 0 hour to 24 hours. The delay time means the programme will start after x hours. When the delay programme starts, the time starts to decrease on the display and the ☀ icon blinks.

Steps in details

- (1).Load your laundry and make sure the machine door is closed.
- (2).Press the 【On/Off】 button,then to turn the programme selector knob and select a desired programme.
- (3).You can select the 【Anti-Crease】 or 【Signal】 functions according to your need.
- (4).To press the 【Delay】 key.
- (5).Continue to press the 【Delay】 to select the delay time.
- (6).After the 【Start/Pause】 key is pushed, the dryer is at the run condition. The drying procedure will be automatically performed when the delay time is over.
- (7).If you push the 【Start/Pause】 button again, the delay function will be paused.
- (8).If you want to cancel the “Delay” function, please press the 【On/Off】 button.

2. Instruction of the 【Time】 function

When the time programme is selected, the 【Time】 button can be used to adjust the drying time in 10 min. steps. The maximum time is 150 min.

3. Instruction of the 【Intensity】 function

Used to adjust the dryness level of the laundry. The level has four grades * * * * .
The drying time increases 3 minutes in every grade.

- (1).The intensity function can be activated only before the programme start.
- (2).Press the 【Intensity】 button repeatedly to select the drying time.
- (3).Except the 【Cotton Iron】 【Delicate】 【Synthetic Iron】 【Wool】 【Time】 , all the other programmes can be setted the 【Intensity】 function.

4. Instruction of the 【My Cycle】 function

Used to define and save your favorite prorammmes that are used frequently.

- (1).Use the programme selector to select the required programme and other drying functions.
 - (2).Press and hold the 【Intensity】 button for 3 seconds until the display flashing and the required programme has been saved.
 - (3).Turn the programme selector to the 【My Cycle】 position, you can start your favorite prorammmes.
- If you want to change the 【My Cycle】 settings, repeat the steps (1) and (2).

5. Instruction of the 【Lamp】

The lamp inside the drum will lighten about 3 minutes when the button pressed or 1 minute the door opened.

6. 【Signal】

Set up the buzzer on or off. In general condition, the buzzer is on. Please press it if needed.

When the buzzer on:

 
- (1) The dryer will give the leading sound if press the extra function buttons.
- (2) If the dryer is running, rotate the function choosing knob, the dryer will remind the operator it is an invalid choose.
- (3) When the drying programme is done, the buzzer will also remind the user.

7. Instruction of the 【Anti-Crease】 function

At the end of the drying cycle, the anti-crease operation time is 30 minutes (default) or 120 minutes (selected).

The 【Anti-Crease】 light shall illuminate when the anti-crease function is selected. This function prevents the laundry from creases. The laundry can be removed during the anti-crease phase. Except 【Cool】 , 【Refresh】 and 【Wool】 , all the other programmes have this function.


8. Instruction of the 【Child Lock】 feature

- (1).This machine incorporates a special child safety lock, which can prevent children from carelessly pressing keys or making the faulty operation.
- (2).When the dryer is at the operation state, press the 【Anti-Crease】 and 【Signal】 buttons at the same time for over 3 seconds to start child lock function. When child lock function is set, the display will show “” icon and no key can effect to the dryer except 【On/Off】 button. Under the start state of the child lock, the 【Anti-Crease】 and 【Signal】 buttons shall be pressed at the same time for over 3 seconds to release the child lock function.


Cleaning and routine maintenance

Empty the water container

1. Hold and pull out the water container with two hands;
2. Tilt the water container, pour out the condensed water into basin;
3. Install the water container.

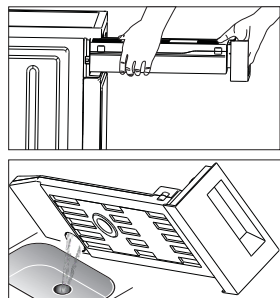


WARNING:

1. Empty the water container after each use, the programme will be paused and the “” icon will flash if the water container is full during the drying process. After the container emptied, the dryer can be restarted by pressing **【Start/Pause】** button.
2. Do not drink the condensed water
3. Do not use the dryer without the water container.


Clean the filter door

1. Open the door.
2. Take out the filter door.
3. Clean the filter door; wipe off the scrap threads accumulated on the filter door.
4. Reinstall the filter door.

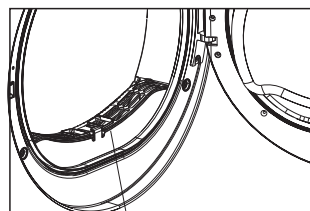

Clean filter base

1. Open the filter cover.
2. Unscrew both locking levers towards each other.
3. Clean the filter base completely.
4. Re-insert the filter base!
5. Screw both locking levers.
6. Close the filter cover flap until it locks into position.

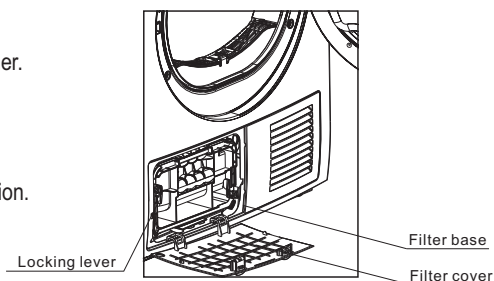

NOTE:


1. The fluff accumulated on the filter will block the air circulation, which will cause the extension of drying time and energy consumption;
2. Do disconnect the power cord before cleaning!
3. Do not operate the dryer without the filter!
4. Clean the filter after each use to prevent lint accumulation inside the dryer.

Clean heat exchanger

As necessary, approx. once every 2 months, remove the fluff from the heat exchanger using the sponge or soft brush.


When doing this, please use gloves.

Note: The fluff can be removed more easily if it is first dampened e. g. with a laundry dampener.

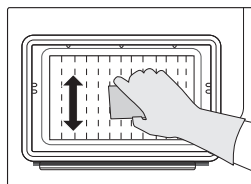

Malfunction display and solutions and Precautions

Malfunction display and solutions

Display	Reason	Solutions
“  ” is on	Container is full	Empty container
	Water pump failure or water level sensor failure	Please contact your local service center if the problem persists
“E32”	Humidity sensor failure	
“E33”	Temperature sensor failure	

Precautions

- ❗ Only authorised technicians can carry out repairs.
Before you call customer service, please check if you have deal with the fault by yourself or if you have follow the user instructions.
A technician will charge you for advice, even during the warranty period.

Problem	Solution
● Display does not light up	● Check if the main plug is inserted. ● Check if the programme is selected. ● Check the main power supply.
● Dryer does not start	● Check if the start button is pushed. ● Check if the door is entirely closed.
● Door is open by itself	● Press door until it “clicks” into position. ● Check if the clothes is over load .
● Degree of dryness is not reached or drying time too long	● Clean the filter door and filter base. ● Use the appropriate programme. ● keep the Air inlet clear.

- ❗ If you cannot deal with the faulty by yourself and need help:
 1. Press the key **【On/Off】** .
 2. Pull out the mains plug and call the service.

Technical specifications

Specification

Power supply	220-240V~ 50Hz
Rated power	650W
Refrigerant	R134a
Ambient temperature	+5℃ ~+35℃
Overall Size	595×622×845(mm)
Rated Drying Capacity	7.0kg
Net Weight	52kg

Contains fluorinated greenhouse gases covered by the Kyoto Protocol.
Hermetically sealed

Note:

1. The rated capacity is the maximum capacity, make sure that the dry clothes which are loaded to the appliance do not exceed the rated capacity each time.
2. Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
3. There is a risk of damage if the condensed water is allowed to freeze in the pump, hoses and / or condensed water container.