



INSTRUCTION MANUAL FOR
OMEGA BAR FRIDGE

OBFD126X
OBFD126B

Thank you for introducing our family to yours

At Omega, we understand that cooking, cleaning and washing may not be your favourite things in the world. That's why we created a range of no-nonsense, reliable products that always get the job done for you. With the features you need and nothing you don't. What's more, they're made to fit perfectly into your home life and your wallet.

We aim to simplify any further appliance purchases. When researching our products you will find a range of icons that visually represent our products key features. Visit our website to learn more about these icons and the features and benefits of our products.

You are welcoming an Omega appliance into your place and you can be sure it'll always serve you well.

For important information about your Omega such as warranty registration, online manuals, specifications and catalogues, please visit

www.omegaappliances.com.au/customer (if you are in Australia) or

www.omegaappliances.co.nz/customer (if you are in New Zealand).

Make sure you activate your product warranty on our websites on the links above.

If you want to know more about promotions, to receive cool tips and tailor made content, like us on www.facebook.com/omegaappliances and follow us on www.instagram.com/omegaappliances_aus.

We hope you love this product as much as we do!



www.omegaappliances.com.au / www.omegaappliances.co.nz



[omegaappliances](https://www.facebook.com/omegaappliances)



[omegaappliances_aus](https://www.instagram.com/omegaappliances_aus)

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS FOR OMEGA BAR FRIDGE

OBFD126X OBFD126B

CONGRATULATIONS

Thank you for choosing one of our refrigeration appliances. We are confident that you will now be able to meet your food & beverage storage needs. Before you use the bar fridge we strongly recommend that you read through the whole user manual which provides the description of this product and the proper use of its functions. To avoid the ever-present risks involved with using an electrical appliance it is vital that the bar fridge is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. It is important that you retain these instructions and your proof of purchase along with any other important documents about this product for future reference.

Due to continual product development, Omega reserves the right to alter specifications or appearances without notice.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	2
INSTALLATION.....	3
APPLIANCE DETAILS.....	4
OPERATING INSTRUCTIONS.....	4
CLEANING.....	5
DATA LABEL & ELECTRICAL DIAGRAMS.....	6
TROUBLESHOOTING.....	7

DISPOSAL INFORMATION

- Most of the packaging materials are recyclable. Please dispose of these materials through your local recycling depot or by placing them into appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

IMPORTANT SAFETY WARNINGS

Read the assembly instruction section and safety precautions of this booklet carefully before removing the contents of this carton.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities,
2. or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the
3. appliance by a person responsible for their safety. Young children should be supervised to insure that they do not play
4. with the appliance.
5. 2. In certain circumstances electrical appliances may be a safety hazard.
6. 3. Do not place heavy objects on this appliance.
7. 4. The appliance is not intended to be operated by means of an external timer or separate remote control system.
8. 5. Electrical connection must be made as per local wiring rules and regulations. Do not disconnect the appliance with wet hands
9. and do not disconnect the power cord with extreme force. Do not coil the cord while in use but keep any excess cord to the
10. back of the appliance. Take care that the power socket is accessible.
11. 6. The appliance should be unplugged when not in use and before any maintenance is carried out on the appliance.
12. 7. If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or a similarly qualified
13. person in order to avoid a hazard.
14. 8. Warning: Ensure that the ventilation openings, in the appliance enclosure or in the built-in structure, are not obstructed.
15. Follow the installation requirements in this manual. Avoid prolonged exposure to direct sunlight.
16. 9. Warning: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended
17. by the manufacturer.
18. 10. Warning: Do not damage the refrigerant circuit.
19. 11. Warning: Do not use electrical appliances inside the food storage compartments of the appliance.
20. 12. Do not store explosive substances such as aerosol cans with flammable propellant in this appliance. Do not modify this
21. appliance.
22. 13. This appliance must be correctly installed by a suitably qualified person, strictly in accordance with the manufacturer's
23. instructions. Please see the specific section of this booklet that refers to installation.
24. 14. When disposing of this appliance, please do so according to local regulations as it contains flammable gas & refrigerant.
25. 15. Do not place hot items on plastic areas of appliance. Do not refreeze food once defrosted. Store pre-packed frozen food in
26. accordance to the manufactures instructions. Take care when freezing liquids as sealed containers can explode under
27. pressure.



DO NOT OPERATE THIS APPLIANCE BEFORE READING THE INSTRUCTION BOOKLET
DO NOT BOOKLET PLACE ARTICLES ON OR AGAINST THIS APPLIANCE
DO NOT STORE CHEMICALS OR FLAMMABLE MATERIALS OR SPRAY AEROSOLS
NEAR THIS APPLIANCE

This appliance is intended to be used in household and similar applications such as:

Staff kitchen areas in shops, offices and other working environments;
Farm houses and by clients in hotels, motels and other residential type environments;
Bed & breakfast type environments;
Catering and similar non-retail applications.

INSTALLATION

Unpacking the Appliance

Remove the external & internal packaging.

When unpacking the appliance please check for any damage. If damage is found, do not connect to the power source and contact the Authorised Service Provider. Check that the following items are contained within the packaging:

- 1 adjustable shelf
- 1 small glass shelf

Before connecting the appliance to the power source, let it stand upright for approximately 4 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation. Remove any protective film from the outer surface.

Clean the interior surface with lukewarm water using a soft cloth.

Installing the Refrigerator

This appliance is designed to be free standing only, and should not be recessed or built-in.

Place your appliance on a solid, level floor that is strong enough to support the appliance when it is fully loaded. Use the adjustable feet at the bottom of the appliance to compensate for any unevenness of the floor.

Allow at least 10 cm of space around the back and sides of the appliance, which allows the proper air circulation, and at least 20cm above the unit.

Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance not to perform properly. Avoid locating the appliance in moist areas.

Plug the appliance into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an Authorised Service Centre.

 
After plugging the appliance into a wall outlet (220-240V 50Hz), allow the unit to cool down for 2~3 hours before placing food in the freezer and refrigeration compartments.

If moving the appliance, avoid tilting the appliance more than 45°. At no time should the appliance be turned upside down.

Adjusting the Door

The door can be adjusted to open from either the left or right hand side. Follow the instructions below (this is structured to transfer the door hinges from the right hand side to the left hand side):

1. Remove the upper hinge cover (6) and remove the upper hinge (5) by unscrewing the two screws (1).
2. Lift the door away and place in a safe position where it won't get damaged.
3. Remove the lower hinge (2) by unscrewing the two screws (8).
4. Remove the left leg (4) and fix it to the right hand side.
5. Remove the screw hole cover (7) from the top left hand side and place it on the top right hand side.
6. Remove the lower hinge pin (9) and reverse the direction of the lower hinge. Screw the lower hinge (2) back using the two screws (8) to the lower left hand corner. Place the lower hinge pin back in to the lower hinge.
7. Place the door back onto the lower hinge pin. Place the upper hinge (5) pin into the top of the door, even the door up to the top of the appliance and fix the upper hinge in place using the two screws (1). Place the upper hinge cover (6) over the upper hinge.

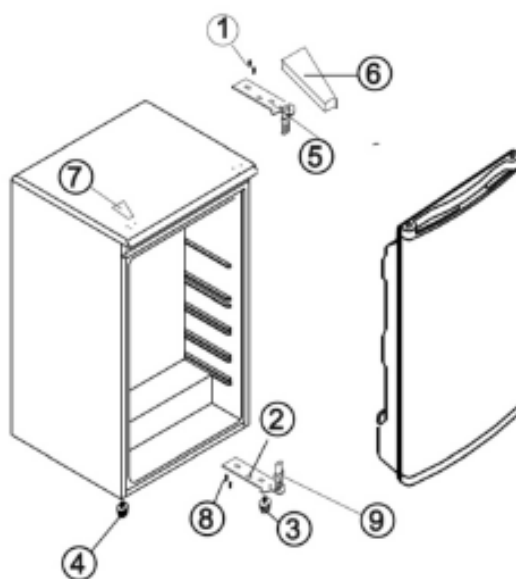


APPLIANCE DETAILS

ELECTRICAL DETAILS:

Rated Voltage: 220-240 Vac 50 Hz.
Supply Connection: 10 A domestic socket.
Max Rated Inputs: See data label on unit.

This information can be found on the rating plate (data label) affixed to the rear of the appliance

 Dimensions (WxDxH): 495x560x828mm
Weight: 23kg

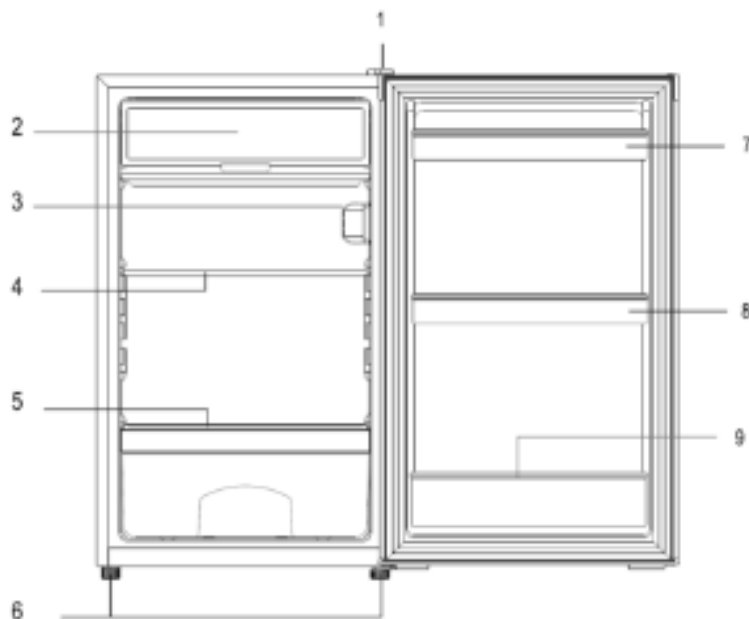


1. Door Hinge.
2. Freezer Compartment.
3. Thermostat Control.
4. Adjustable Shelf.
5. Small Glass Shelf.
6. Adjustable Feet.
7. Upper Door Shelf
8. Central Door Shelf
9. Lower Door Shelf

OPERATING INSTRUCTIONS

Once plugged into the power supply and turned on, adjust the thermostat control to the coldest setting (7) and allow the appliance to run for 2-3 hours before placing any food inside. Adjust the thermostat to the central mark (3-4) and then adjust up or down to suit the food inside, the room temperature, introduction of large amounts of warm food, number of times door is opened etc.

 To turn off, adjust the setting to 0.

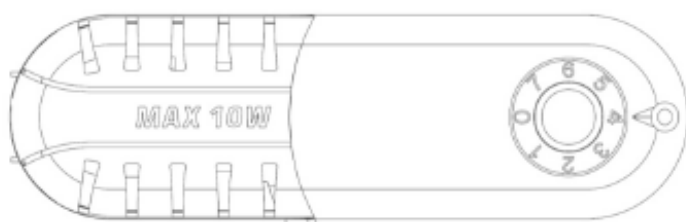

During use, moisture from the air & food can collect inside the appliance forming a layer of ice. Ice will limit the transfer of heat out of the appliance. If this becomes more than 2mm thick, the appliance should be defrosted. Turn the thermostat to 0 & remove any food from the freezer compartment and refrigerator. Open the outer door & prop open the freezer compartment door. Allow the ice to melt and let water collect in the tray under the freezer compartment. Discard any water and ice and replace tray. To speed up the process, a bowl of warm water (~50°C) can be placed inside the compartment. Do not scrape ice from the compartment walls & do not use any other heating devices (as it is a safety hazard and may damage the appliance).

CARE AND MAINTENANCE

CLEANING THE APPLIANCE

Upon installation of your new appliance, it is recommended that it be cleaned thoroughly, and cleaned once a month after that.

To clean the appliance, first turn the thermostat to 0, turn off the power, unplug from the power socket and remove all food and shelving.

Wash the inside with a damp warm cloth containing a water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.

Wash the shelving with a mild detergent solution.

Be sure to keep the door gasket (seal) clean to keep the unit running efficiently.

The outside of the appliance should be cleaned with mild detergent and warm water.

Dry the interior and exterior with a soft cloth.

It is recommended that the unit be cleaned each time it is defrosted to help keep the unit odour free and running efficiently.

Do not use oils, abrasive cleaners, petroleum products, acids or alkaline detergents, as they can damage the appliance.

MOVING THE APPLIANCE

Remove all the food.

Securely tape down all loose items inside the appliance.

Tape the doors shut.

Be sure the appliance stays in the upright position during transportation.

ENERGY SAVING TIPS

The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.

Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that cool or freeze too slowly may lose quality, or spoil.

Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the freezer and bad odours.

The freezer compartment should not be lined with aluminium foil, wax paper, or paper towels. Liners interfere with cold air circulation, making the freezer less efficient.

 
Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

When adding fresh food, try to add it to the bottom of the freezer, surrounded by food that is already frozen. After adding fresh food to the freezer, allow 24 hours for it to be fully frozen before adding any more fresh food.

DATA LABEL & ELECTRICAL DIAGRAM

omega

REFRIGERATOR

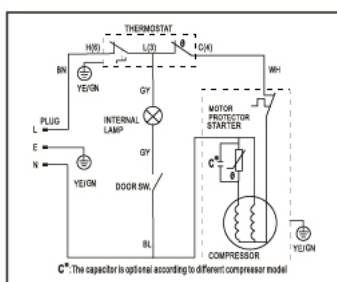

Model No. OBFD126X

Gross volume: 126L
Storage volume: 124L

 
220 - 240V ~ 50Hz
Rated current: 0.55A
Rated power of lamp: 10W
Energy consumption: 0.698kW.h/24h
Climate class: T
Refrigerant: R600a(29g)
Insulation blowing gas: Cyclopentane

Made in China



omega

REFRIGERATOR

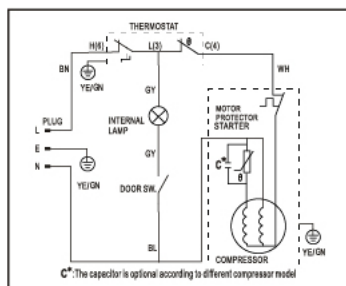

Model No. OBFD126B

Gross volume: 126L
Storage volume: 124L

220 - 240V ~ 50Hz
Rated current: 0.55A
Rated power of lamp: 10W
Energy consumption: 0.698kW.h/24h
Climate class: T
Refrigerant: R600a(29g)
Insulation blowing gas: Cyclopentane

Made in China



TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE
Appliance does not operate.	Not plugged in. The circuit breaker tripped or a blown fuse.
Compressor turns on and off frequently.	The room temperature is hotter than normal. A large amount of food has been added to the freezer. The door is open too often, or not fully closed. The temperature control is not set correctly. The door gasket does not seal properly. The appliance does not have the correct clearances. The appliance has recently been disconnected for a period of time. Four hours are required for the appliance to cool down completely.
Temperature inside the appliance is too warm.	Temperature control is set too warm. Turn the control to a cooler setting and allow several hours for the temperature to stabilize. Door is kept open too long or opened too frequently. Open the door less. The door is not closed completely. The door gasket does not seal properly. A large amount of warm or hot food might have been stored recently. Wait until the appliance has had a chance to reach its selected temperature. The appliance has recently been disconnected for a period of time. Four hours are required for the appliance to cool down completely.
Temperature inside the appliance is too cold.	Temperature control is set too cold. Turn the control to a warmer setting and allow several hours for the temperature to stabilize.
Popping or cracking sound when compressor comes on.	Metal parts undergo expansion and contraction, as in hot water pipes. This is normal. Sound will level off or disappear as freezer continues to run.
Bubbling or gurgling sound, like water boiling.	Refrigerant (used to cool appliance) is circulating throughout the system. This is normal.
Vibrations.	Check to assure that the appliance is level. Floor is uneven or weak. Appliance rocks on the floor when it is moved slightly. Be sure floor can adequately support appliance. Level the appliance by adjusting the adjustable feet. The appliance is touching the wall. Re-level the appliance and move it from the wall. See "Installation Instructions".
Moisture forms on inside freezer walls.	Weather is hot and humid, which increases internal rate of frost build-up. This is normal. Door is slightly open. Door is kept open too long, or is opened too frequently. Open the door less often. The door is not sealed properly.
Moisture forms on outside of appliance.	Door is slightly open, causing cold air from inside the freezer to meet warm moist air from outside.
The door will not close properly.	The appliance is not level. The gasket is dirty.

IMPORTANT: If your appliance appears not to be operating correctly, turn off the appliance at the switch and then contact the Service Department.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

The appliance must be accessible for a qualified person to perform any necessary repair.
To replace the globe (220-240V AC, 10W E14), first turn the appliance off and unplug from the power source. Remove the drip tray. Push the clear cover towards the back of the appliance and remove. Unscrew the globe and replace. Align the cover with the mounting and pull forward to clip in place. Replace the drip tray



NEW ZEALAND PRODUCT WARRANTY STATEMENT OF STANDARD WARRANTY CONDITIONS

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993. OUR WARRANTY

This product is also covered by the manufacturer's warranty set out in this document (Our Warranty).

Our Warranty is for a period of forty eight (48) months from the date of purchase.

This is in addition to (and does not exclude, restrict or modify) any rights or remedies to which you may already be entitled to under the New Zealand Consumer Guarantee act 1993 relating to this product.

Our warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defective materials or components or faulty workmanship.

The product will be repaired or replaced at the option of Omega.

Our warranty is subject to the following conditions:

1. That the purchaser contacts Omega prior to any product repair.
2. That the purchaser carefully follows all instructions provided with the product and complies with all relevant electrical & plumbing regulations when installing the product.
3. That the purchaser carefully follows the instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the DOMESTIC use for which it has been designed.

WHAT IS COVERED: By Our Warranty

During the warranty period, Omega or its authorised Service Centre will, at no extra charge, if your appliance is readily accessible without the need of special equipment and subject to the terms and conditions of this warranty, repair or replace any parts which it considers defective.

WHAT IS NOT COVERED: By Our Warranty

1. Products installed damaged or incomplete or not in compliance with the relevant electrical & plumbing regulations in their State.
2. Normal wear and tear e.g. cleaning, light globes, filters etc.
3. Failure resulting from power surges and electrical storms.
4. Insect or vermin infestation.
5. Unauthorised repairs or use of non- genuine Omega parts.
6. Any failure caused by the product not being used in accordance with the instruction and the installation manual provided with the product.
7. Misuse or abuse, including failure to properly maintain or service.
8. The clearing of blockages in pumps and hoses.
9. Damage which occurs during delivery or installation.
10. Claims to product surface coating due to liquid or solid spill-overs, accidental damage or damage caused from cleaning products not recommended by Omega.

HOW TO CLAIM YOUR WARRANTY

Please refer to our website address below for Omega to register your warranty online.

If you are contacting Omega regarding any warranty claims and spare parts inquiries, please make sure you have the following information on hand:

1. **Product Name/Model Number**
2. **Serial Number/s**
3. **Purchase Date (as per invoice or proof of purchase)**
4. **Purchased From**
5. **Warranty Registration Number**

www.omegappliances.co.nz

Omega is division of Monaco Corporation Limited (Member of Shiro Australia PTY LTD)

Phone: (09) 415 6000

Email: customercare@monacocorp.co.nz