

Instructions for the Use and Care and Installation of

ORU50PX

Undermount Range Hoods

Thank you for introducing our family to yours

At Omega, we understand that cooking, cleaning and washing may not be your favourite things in the world. That's why we created a range of no-nonsense, reliable products that always get the job done for you. With the features you need and nothing you don't. What's more, they're made to fit perfectly into your home life and your wallet.

We aim to simplify any further appliance purchases. When researching our products you will find a range of icons that visually represent our products key features. Visit our website to learn more about these icons and the features and benefits of our products.

You are welcoming an Omega appliance into your place and you can be sure it'll always serve you well.

For important information about your Omega such as warranty registration, online manuals, specifications and catalogues, please visit

www.omegaappliances.com.au/customer (if you are in Australia) or

www.omegaappliances.co.nz/customer (if you are in New Zealand).

Make sure you activate your product warranty on our websites on the links above.

If you want to know more about promotions, to receive cool tips and tailor made content, like us on www.facebook.com/omegaappliances and follow us on www.instagram.com/omegaappliances_australia.

We hope you love this product as much as we do!



www.omegaappliances.com.au / www.omegaappliances.co.nz



omegaappliances



omegaappliances_australia

CONTENTS

- 1) WARNING
- 2) INSTALLATION INSTRUCTIONS
- 3) OPERATION
- 4) LIGHT REPLACEMENT
- 5) CLEANING
- 6) ATTENTION
- 7) TROUBLESHOOTING
- 8) APPLIANCE DIMENSIONS

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference.

Due to continual product development, Omega reserves the right to alter specifications or appearances without notice.

Dispose of packaging responsibly – recycle where facilities are available.

1. WARNING

- Young children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervised or instruction concerning use of the appliance by a responsible person for their safety.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Your cooker hood is for domestic use only, not suitable for barbecue, fast -food shops, and other commercial use.
- Any installation work must be carried out by a qualified electrician or competent person.
- The cooker hood and its filter mesh should be cleaned regularly in order to keep in good working order.
- Before cleaning, always ensure that you have switched your cooker hood off.
- Do not flambé under the range hood.
- Clean the cooker hood according to the instruction manual, and keep the cooker hood away from the danger of flames.
- If there is any fault with your cooker hood, please call the customer service number in the Warranty Card.
- Please keep the room adequately ventilated when your cooker hood and gas hob are working.
- Caution: Accessible parts may become hot when used with a cooking appliance

Note: The instructions must include details concerning cleaning instructions and frequency of cleaning.

For Installation Instructions:

- The exhaust air must not be discharged into a flue which is used for exhausting fumes for other appliances burning gas or other fuels. (Not applicable for appliances which only discharge air back into the room.
- The minimum distance between the supporting surface for the cooking vessels of the hob at the lowest part of the range hood must be 65cm.
- Regulations concerning the discharge of air have to be fulfilled.
- Warning: Failure to install the screws or fixing devices in accordance with the instructions may result in an electrical hazard.

2. INSTALLATION

Please ensure that before installing the range hood all power has been switched off. Installation must be in accordance to the local electrical authority and codes. This range hood must be earthed at all times for the operators' safety.

The power socket for the range hood should be positioned to enable the user to turn the power on and off easily (as there are no controls on the appliance) and to turn the appliance off to enable cleaning and any maintenance required.

Ensure that when installing the range hood, that it is protected from any possible damage from tools etc.

Ducting for this unit must be installed in accordance to the local authority. Ensure that the fixings used for this range hood are suitable.

Check the area where the range hood is to be fitted, to ensure that it is structurally sound.

Before using the appliance, remove the plastic coatings protecting the stainless steel finish.

Ensure that the wall is structurally sound, and is capable of carrying the weight of the range hood.

It is recommended that the dimension be checked on the range hood before installing.

1. The cooker hood should be placed at a distance of 65-75cm from the cooking surface for the best effect.
2. Drill a hole in the cupboard, 490*265(mm) for model ORU50PX. Make sure the distance between the edge of the hole and the edge of the cupboard edge is at least 35mm. Remove the filter. Remove the two halogen lights (twist anticlockwise), unscrew the two screws holding the lower fascia panel and remove the lower fascia panel.
3. Fit the two flaps into the outlet (tabs facing upwards) creating the one way valve.
4. Fit the appliance into the 490*265mm hole, and fix into place using the supplied wood screws (8 positions).
5. Reattach the lower fascia panel using the two original 10mm screws. Refit the two halogen lights and attach the filter.
6. Connect the electrical plug to the power socket and test that the lights and fan operate when power is turned on.
7. Connect ducting (outlet is Ø150mm) to the outlet of the appliance. The ducting must remove the exhaust from the room.

3. OPERATION:

Note: Before the unit can be operated, it must be ducted.

1. Connect the plug to the power at the power socket.
2. Turn power on at the power socket which will start the appliance.
3. To turn the appliance off, turn the power off at the power socket.

If your range hood does not function correctly when attempting any of the above, please ensure that your power is on and is functioning correctly. If the power seems to be functioning correctly in the house, there may be a problem with the range hood. Please call your authorised Omega service centre in this case to organise a service call.

4. LIGHT REPLACEMENT

1. Turn the power off and disconnect from mains power.
2. Remove filter and read labels regarding maximum lamp ratings.
3. Press the light face and remove by turning in anticlockwise direction.
4. Pull out the halogen light bulb carefully and replace by same type and same rated halogen light bulb (12V 40W MAX). NOTE: take care as halogen lamps can get hot.

5. CLEANING

SAFETY PRECAUTION

Before cleaning your range hood or performing any maintenance, please ensure that the range hood been disconnected at the power socket.

Do not use abrasive cleaners to clean the range hood. The use of warm soapy water and a cloth are recommended.

Ensure that the range hood is cleaned regularly, as a build-up of grease and fat may occur otherwise.

The filters on the range hood must be cleaned regularly to maintain efficiency, and prevent grease build up.

It is recommended that this is undertaken every 4 – 6 weeks, depending on frequency of use.

The filters can be cleaned with warm soapy water or a cloth, or they may be washed in a dishwasher. If washed in a dishwasher, discolouration may occur to the mesh and frame.

Cleaning of the range hood must be performed as described above, otherwise there is a possibility of a fire hazard due to grease and fat build up.


6. SPECIFICATIONS

Voltage	220V-240V~50Hz
Rated motor input power	190W
Illumination	≤ 40W+40W(GU-10 base halogen)
Rated input power	270W
Airflow	667m ³ /hr
Outlet diameter	150mm

7. TROUBLESHOOTING

Fault	Cause	Solution
Light does not work, but motor works.	The lamp may be damaged.	Replace lamp.
Light works, but motor does not work.	Motor bearings damaged.	Contact Service.
	Motor burn out.	Contact Service.
Light does not work, motor does not work.	Power supply interrupted.	Check at meter board.
	Plug incorrectly fitted.	Push plug in.
	Power wire cut.	Contact service.
Appliance vibrates excessively.	Fan is damaged.	Contact service.
	Motor screw loose.	Contact service.
	Mounting screw loose.	Tighten screw.
Insufficient suction.	The distance between the body and the cooktop is too high.	Readjust the distance.
	Cross-ventilation too strong or not enough ventilation.	Reduce cross-ventilation or open the window.
	Ducting too long.	Reduce ducting length.
	Outlet valve not opening.	Check flaps are opening.
	The outside wind is too strong.	No the technical problem.

8. APPLIANCE DIMENSIONS

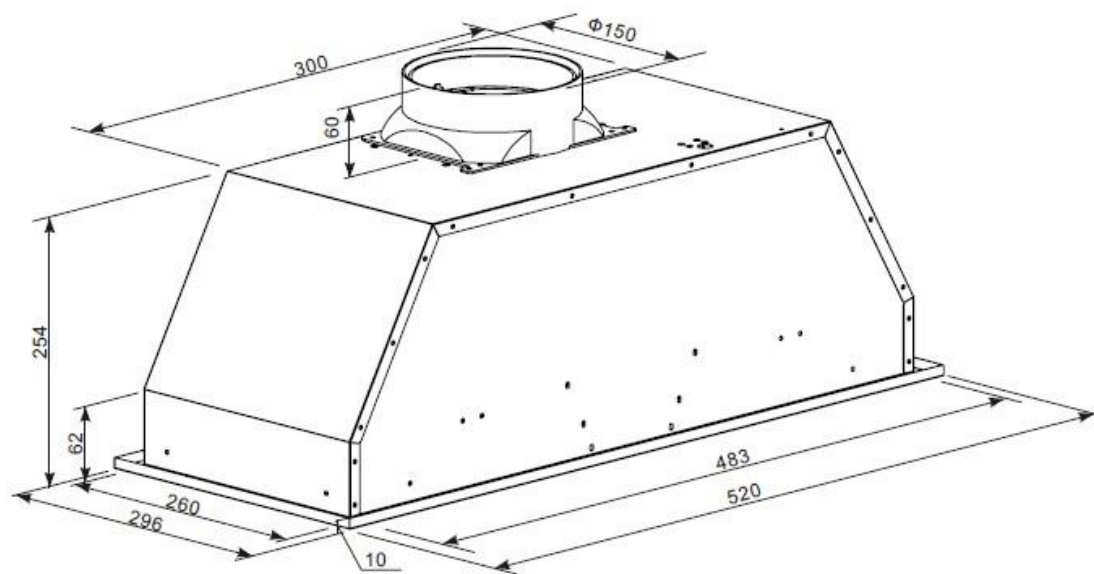

AUSTRALIAN & NEW ZEALAND PRODUCT WARRANTY STATEMENT OF STANDARD WARRANTY CONDITIONS

AUSTRALIAN CUSTOMERS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NEW ZEALAND CUSTOMERS

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993.

OUR WARRANTY

This product is also covered by the manufacturer's warranty set out in this document (**Our Warranty**).

Our Warranty is for a period of **twenty four (24) months** from the date of purchase and for refrigeration appliances will have an additional **thirty six (36) months** after the first **twenty four (24) months** on the Sealed System (**PARTS only**) Compressor & condenser etc. The labour cost to replace these parts is the responsibility of the customer.

This is in addition to (and does not exclude, restrict or modify) any rights or remedies to which you may already be entitled to under the Australian consumer law or the New Zealand Consumer Guarantee act 1993 relating to this product.

Our warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defective materials or components, or faulty workmanship. The product will be repaired or replaced at the option of Omega, and all costs of installation, removal, cartage, freight travelling and insurance are to be paid by the customer.

Our warranty is subject to the following conditions:

1. That the purchaser contact Omega prior to any product repair.
2. That the purchaser carefully follows all instructions provided with the product and complies with all relevant electrical & plumbing regulations in their State when installing the product.
3. That the purchaser carefully follows the instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the DOMESTIC use for which it has been designed. If the appliance is used in commercial applications or for rental purposes, **Our Warranty** is limited to a warranty of **Twelve (12) months** covering all parts with **Three (3) months** on any labour cost of service or repair.

SERVICE AREA

The provision of service under **Our Warranty** is limited by the boundary / territory area of the nearest service centre. Travelling cost incurred for service outside this area is not covered by Our Warranty and service will incur commercial cost to be paid by the customer regulated by the number of kilometres travelled beyond the service area. These costs will be disclosed to you for acceptance by you prior to your claim being processed.

Microwave ovens must be returned to your nearest Authorised Service Centre for repair as they are a carry in serviceable appliance.

WHAT IS COVERED: By Our Warranty

During the warranty period, Omega or its authorised Service Centre will, at no extra charge, if your appliance is readily accessible without the need of special equipment and subject to the terms and conditions of this warranty, repair or replace any parts which it considers defective.

WHAT IS NOT COVERED: By Our Warranty

1. Products installed damaged or incomplete or not in compliance with the relevant electrical & plumbing regulations in their State.
2. Normal wear and tear e.g. cleaning, light globes, filters etc.
3. Failure resulting from power surges and electrical storms.
4. Insect or vermin infestation.
5. Unauthorised repairs or use of non- genuine Omega parts.
6. Any failure caused by the product not being used in accordance with the instruction and the installation manual provided with the product.
7. Misuse or abuse, including failure to properly maintain or service.
8. The clearing of blockages in pumps and hoses.
9. Damage which occurs during delivery or installation.
10. Claims to product surface coating due to liquid or solid spill-overs, accidental damage or damage caused from cleaning products not recommended by Omega.

HOW TO CLAIM OUR WARRANTY

You will need to contact Omega in Australia or New Zealand by using the contact details below.

IN AUSTRALIA

Omega is a division of Shriro Australia Pty Ltd
ABN 28 002 386 129
Locked Bag 5002, Kingsgrove, NSW, 2208
Phone: 1300 795 572 Fax: 1800 686 413
Email: customercare@shriro.com.au

Web: www.omegaappliances.com.au

IN NEW ZEALAND

Omega is a division of Monaco Corporation
(Member of Shriro Australia Pty Ltd)
PO Box 4399, Shortland St, Auckland, 1140
Phone: 09 415 6000 Fax: 09 415 7060
Email: service@shriro.com.au

Note: Please complete the following details when you have unpacked the product:

Model No.....

Serial No.....

Date of Purchase.....

Retailer.....